



Traymaster Series
Deaerators
Operation, Maintenance and Parts



750-273
01/09

TO: Owners, Operators and/or Maintenance Personnel

This operating manual presents information that will help to properly operate and care for the equipment. Study its contents carefully. The unit will provide good service and continued operation if proper operating and maintenance instructions are followed. No attempt should be made to operate the unit until the principles of operation and all of the components are thoroughly understood.

It is the responsibility of the owner to train and advise not only his or her personnel, but the contractors' personnel who are servicing, repairing, or operating the equipment, in all safety aspects.

Cleaver-Brooks equipment is designed and engineered to give long life and excellent service on the job. The electrical and mechanical devices supplied as part of the unit were chosen because of their known ability to perform; however, proper operating techniques and maintenance procedures must be followed at all times.

Any "automatic" features included in the design do not relieve the attendant of any responsibility. Such features merely free him of certain repetitive chores and give him more time to devote to the proper upkeep of equipment.

It is solely the operator's responsibility to properly operate and maintain the equipment. No amount of written instructions can replace intelligent thinking and reasoning and this manual is not intended to relieve the operating personnel of the responsibility for proper operation. On the other hand, a thorough understanding of this manual is required before attempting to operate, maintain, service, or repair this equipment.

Operating controls will normally function for long periods of time and we have found that some operators become lax in their daily or monthly testing, assuming that normal operation will continue indefinitely. Malfunctions of controls lead to uneconomical operation and damage and, in most cases, these conditions can be traced directly to carelessness and deficiencies in testing and maintenance.

The operation of this equipment by the owner and his operating personnel must comply with all requirements or regulations of his insurance company and/or other authority having jurisdiction. In the event of any conflict or inconsistency between such requirements and the warnings or instructions contained herein, please contact Cleaver-Brooks before proceeding.

Cleaver-Brooks
TRAYMASTER Series
Deaerators
Operation, Maintenance and Parts



**Please direct purchase orders for replacement manuals to your
local Cleaver-Brooks authorized representative**

Manual Part No. 750-273
01/09

Printed in U.S.A.

Table of Contents

Section 1		
Introduction		
	Introduction	1-2
	Component / Connection Locations	1-3
	Principles of Operation	1-4
Section 2		
Installation		
	Installation - General	2-2
	System Layout/Piping Configurations	2-2
	Steam Piping	2-6
	Vent Valve	2-6
	PRV and Safety Relief Valve	2-7
	Pumps	2-9
	High Water Alarm	2-15
	Low Water Alarm and LW Cutoff Series 64 McDonnell & Miller	2-16
Section 3		
Startup and Operation		
	Commissioning / Initial Startup	3-2
	Operation and Adjustments	3-2
Section 4		
Maintenance		
	General Maintenance	4-2
	Pumps	4-4
	Water Level Controls	4-9
	Overflow Trap	4-10
Section 5		
Troubleshooting		
	Deaerator Troubleshooting - General	5-2
	Pumps	5-3
	High Water Alarm Series 63 McDonnell & Miller	5-5
	Low Water Cutoff Series 64 McDonnell & Miller	5-5
	Low Water Cutoff Series 93/193 McDonnell & Miller	5-6
Section 6		
Parts		
	Standard Traymaster Parts	6-2
	Manway Cover Assemblies	6-2
	Pressure Reducing Valves (Fisher 92 Series)	6-2
	Pressure Reducing Valves (Spence ED Series)	6-3
	Pressure Reducing Valves (Spence E2D Series)	6-3
	Valve Sets for Gauge Glass	6-4
	Overflow Drainer (Steam Trap)	6-4
	Siemens Actuator Series 599	6-5
	Siemens Actuator Series 599	6-6
	Wiring Diagram for use with Siemens Actuator Series 599	6-7
	Make-Up Controls (Fisher 171L)	6-8
	Make-Up Controls (Fisher 670EK)	6-8
	Make-Up Controls (Fisher 608EK)	6-8

Make-Up Controls (Fisher 657ES)	6-8
Spray Valve	6-9
Tray Assembly	6-9
Manway Assembly, 16" Davited, 50# D.P.	6-10
Manway Assembly, 18" Davited, 50# D.P.	6-11
Manway Assembly, 20" Davited, 50# D.P.	6-12
Manway Assembly, 24" Davited, 50# D.P.	6-13
Manway Assembly, 28" Davited, 50# D.P.	6-14
Manway Assembly, 32" Davited, 50# D.P.	6-15
Manway Assembly, 36" Davited, 50# D.P.	6-16

Notes



Section 1

Introduction

Introduction	1-2
Component / Connection Locations	1-3
Principles of Operation	1-4

1.1.Introduction

The Traymaster Deaerator (**Figure 1-1**) is designed to operate with steam boilers in steam generation plants, or wherever oxygen-free water is required.

Boiler feedwater usually contains two harmful dissolved gases - oxygen and carbon dioxide. The purpose of deaeration is to remove these gases before they are liberated in the boiler. This reduces oxidation corrosion in the boiler, steam lines, condensate lines, and heat transfer equipment.

The deaerator conditions feedwater so that it contains less than 0.005 CC oxygen per liter. Residual oxygen is to be removed by chemical means. Carbon dioxide is, for all practical purposes, eliminated. In addition, the water is preheated as a result of the deaeration process, thereby increasing the thermal efficiency of the boiler.



Figure 1-1 Traymaster Deaerator



Figure 1-2 Tray column - section view

Deaerators are designed to operate on steam from the boiler, exhaust steam, or both. If exhaust or flash steam is currently going to waste or vented to atmosphere, it may be used in the deaerator — reducing the fuel expense of the plant. There is a possible savings of approximately 1% for each 10°F rise in boiler feedwater temperature.

NOTE: Exhaust steam, if used, must be free of oils and other contaminants, be of continuous supply, and at the required pressure. Care must be taken to avoid problems with the equipment from which steam is extracted.

Table 1-1 Standard Storage Tank Capacities

Traymaster MODEL	TMP030	TMP045	TMP070	TMP100	TMP125	TMP140	TMP175	TMP200	TMP225	TMP250	TMP300	TMP350	TMP400	TMP450	TMP500
TANK CAPACITY GALLONS	600	900	1400	200	2500	2800	3500	4000	4500	5000	6000	7000	8000	9000	10000

1.2.Component / Connection Locations

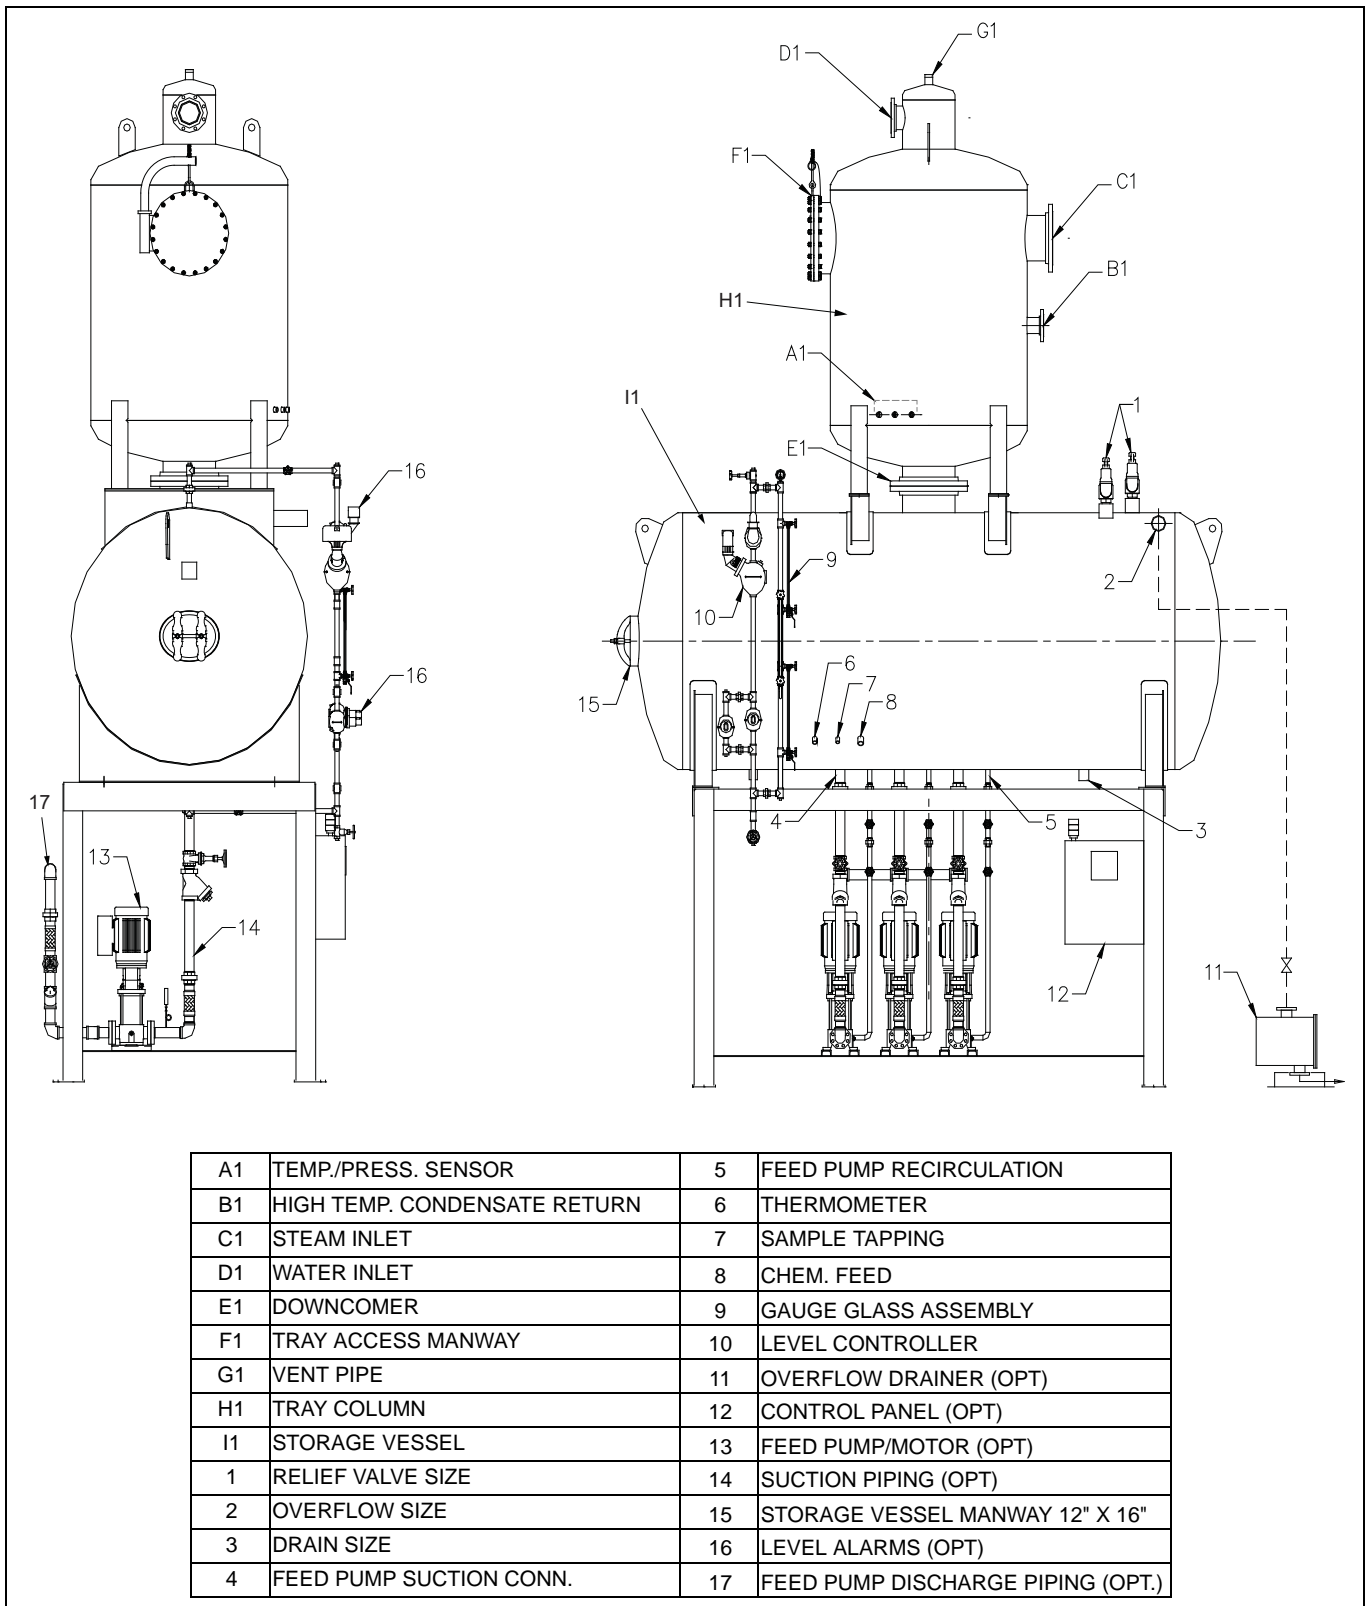


Figure 1-3 Traymaster Component/Connection Locations

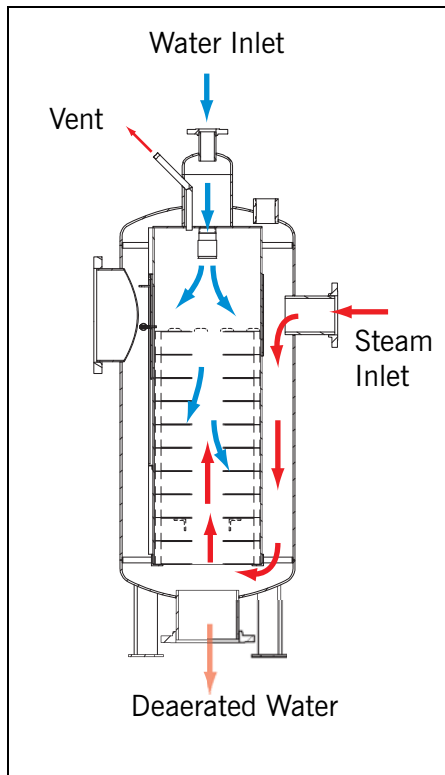


Figure 1-4 Tray Column Steam and Water Flow

1.3.Principles of Operation

Deaeration in the Traymaster is a two-stage process. Water entering the tray section passes through a spring-loaded, self-cleaning spray valve and traverses the steam atmosphere of the upper portion of the tray box. The majority of deaeration occurs when the cold non-deaerated water comes into contact with saturated steam.

Now partially deaerated, the water begins to cascade downward through the tray column as steam from the steam inlet flows upward. The counter-flow of steam and water has the effect of scrubbing dissolved gases from the feedwater. Deaerated water passes through the downcomer into the storage tank while gases are eliminated through the vent. The vent pipe passes through the raw water containment vessel and transfers heat to the water before venting to atmosphere.

During the deaeration process the water temperature is raised to within 2° or 3° of steam temperature and virtually all the gases are released to atmosphere.

A typical Cleaver-Brooks Traymaster Deaerator is shown in **Figure 1-1**, which illustrates a packaged type deaerator tank mounted on a stand of appropriate height, and includes all operating controls and boiler feed pump(s), assembled and piped.

Cleaver-Brooks also supplies deaerator tanks for installation with pumps and stands provided by others. Standard components in the package include such items as relief valves for the tank, steam pressure reducing valve, make-up water control valve, and an overflow drainer. These components are provided with the deaerator tank, as their sizing is critical to proper operation.

The vessel is standardly a 50 psig ASME vessel containing an elliptical 12" x 16" manway and fitted with a 0-60 lb pressure gauge, a 50 – 300 °F thermometer, and water level gauge glass (or glasses).

The main deaerating column is mounted vertically on top of the horizontal vessel and consists of a water inlet/vent condenser with spray valve, tray column, steam inlet, and downcomer. The water inlet, tray box, and tray assemblies are all stainless steel. Trays are shipped pre-installed in the tray column.



Section 2 Installation

Installation - General	2-2
System Layout/Piping Configurations	2-2
Steam Piping	2-6
Vent Valve	2-6
PRV and Safety Relief Valve	2-7
Pumps	2-9
High Water Alarm	2-15
Low Water Alarm and LW Cutoff Series 64 McDonnell & Miller	2-16

2.1. Installation - General

Some installations may use specialized equipment not covered in this manual. In such cases, refer to the manufacturer's literature. Familiarize yourself with the instructions for the particular items furnished.

Installation should conform to the manufacturer's prints supplied for the system. Check all piping for proper connections. Check all valves and controls to be sure they are installed with proper direction of flow.

All electrical work should be performed by a qualified electrician in accordance with the latest edition of the National Electrical Code, local codes and regulations.

Note: Trays must be level for proper deaeration. Deaerator must be shimmed as necessary to ensure levelness. Out of level trays will result in unequal distribution of water and incomplete deaeration.

2.2. System Layout/Piping Configurations

Three typical system lay-outs are shown in Figures 2-1, 2-2, and 2-3 below. Note that in all cases the minimum supply water pressure requirement is 10-12 lbs, and that the recommended steam pressure within the deaerator storage tank is 5 psig.

If water exceeds 1 part per million of hardness, a water softener is recommended.

All supply water to the deaerator, with the exception of uncontrolled condensate return, must be limited to the maximum capacity of the deaerator, whether the source is a condensate pump, a transfer pump, or a city water supply. This is usually accomplished by manual adjustment of a control valve in the transfer pump discharge line. *This adjustment is of extreme importance to proper operation.* The make-up water must be modulated into the deaerator and must not exceed the deaeration capacity of the model.

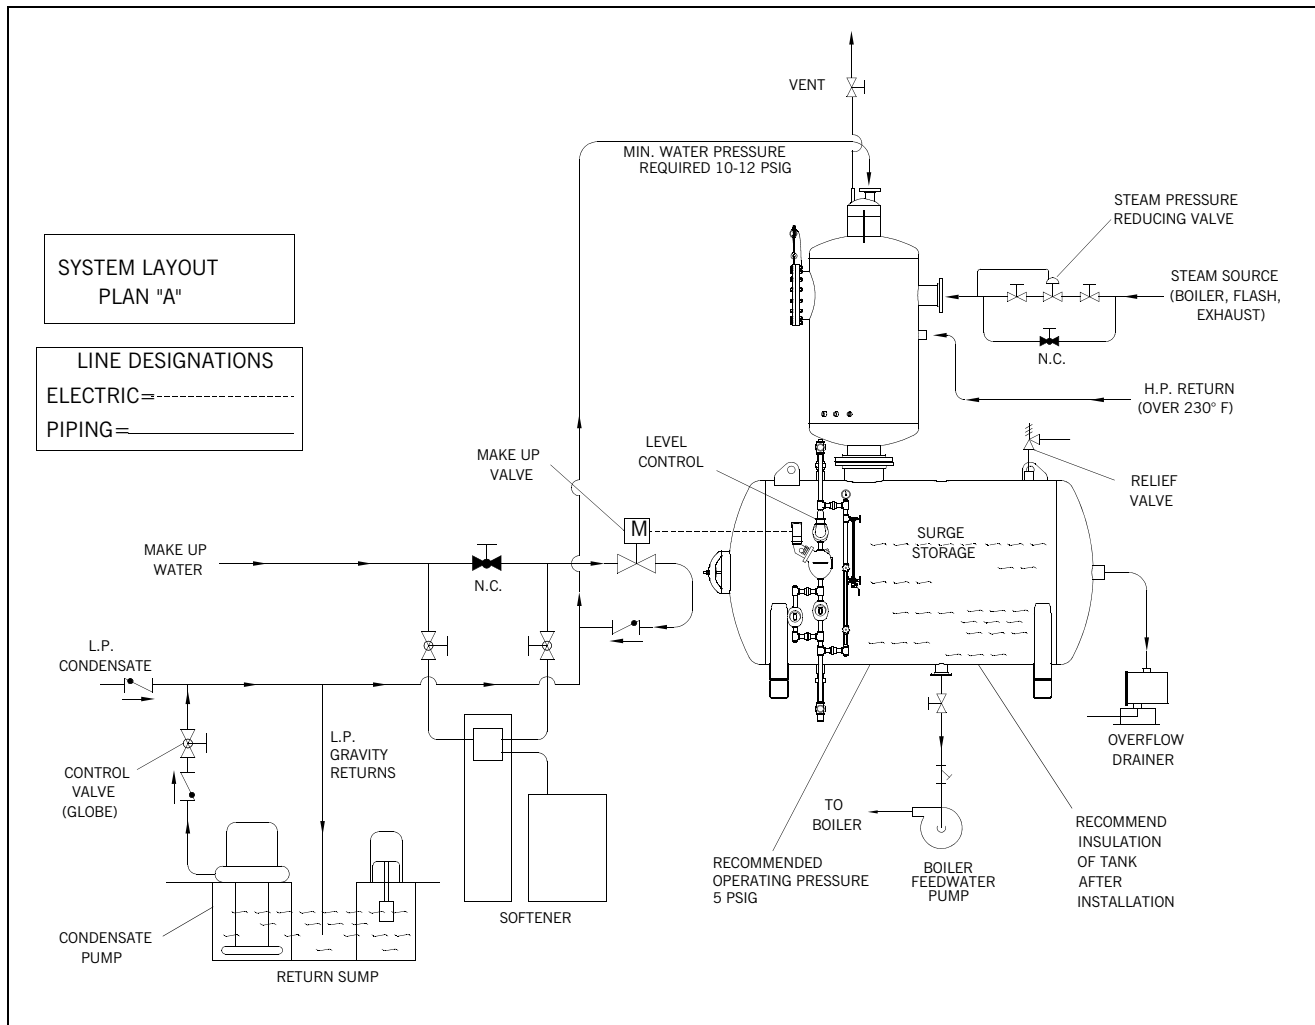


Figure 2-1 System Layout - Plan A

Plan A

Under normal operating conditions, the make-up water will be automatically combined with low or medium temperature (up to 230 deg F) condensate to maintain water in the storage tank at the correct level. Makeup water will only enter the system when there is insufficient condensate return.

High pressure (high temperature) returns may be piped directly to the deaerator's tray column HP return connection. High pressure trap returns are defined as being at a temperature greater than the normal operating temperature of the deaerator or in excess of 230 deg F.

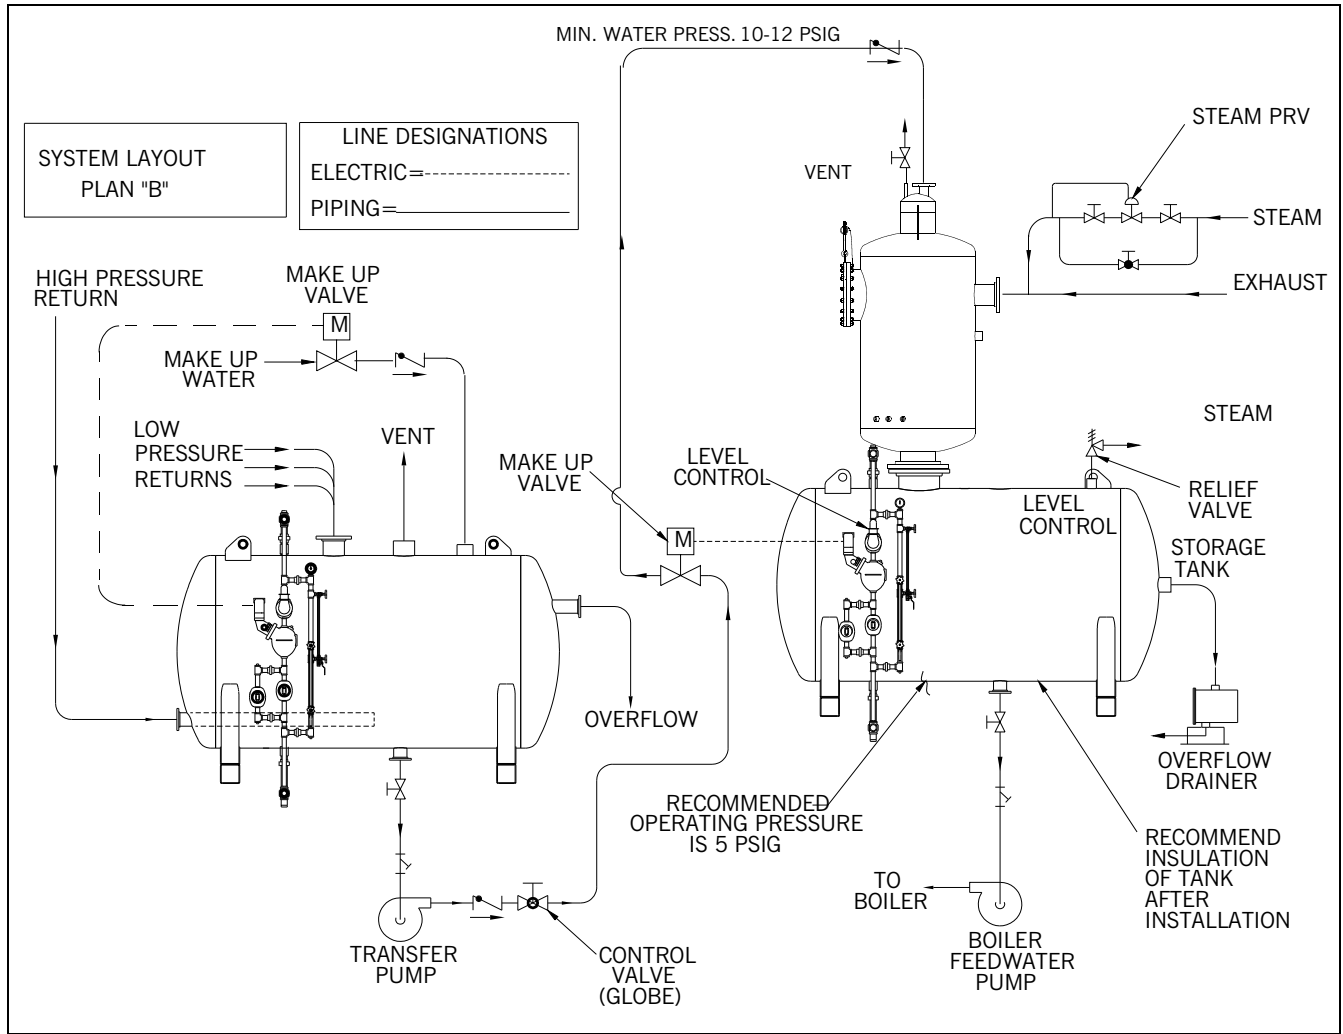


Figure 2-2 System Layout - Plan B

Plan B

In this layout the high pressure returns, low pressure returns, and cold water makeup are collected in the surge tank. The output of the transfer pump is adjusted through a control valve to prevent flooding of the deaerator storage tank.

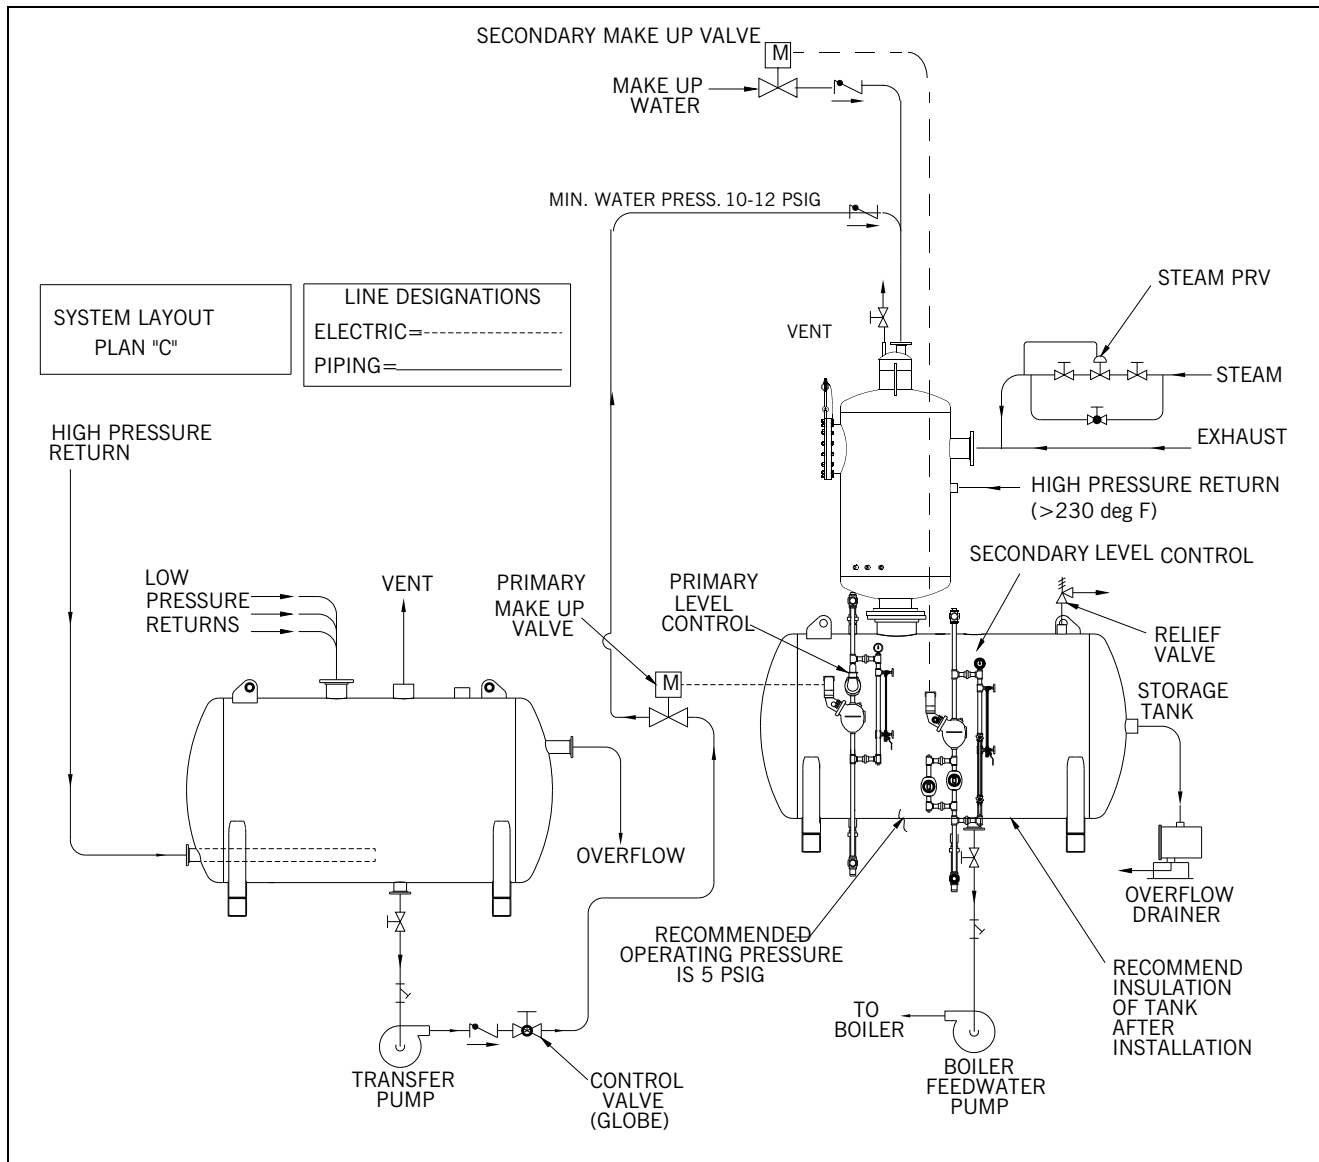


Figure 2-3 System Layout - Plan C

Plan C

In this layout the high temperature returns and low pressure returns are collected in the surge tank. The output of the transfer pump is adjusted through a control valve to prevent flooding of the deaerator storage tank.

Condensate return is used first as makeup.

Cold water makeup is used as a secondary makeup source.

2.3. Steam Piping

See Figure 2-4.

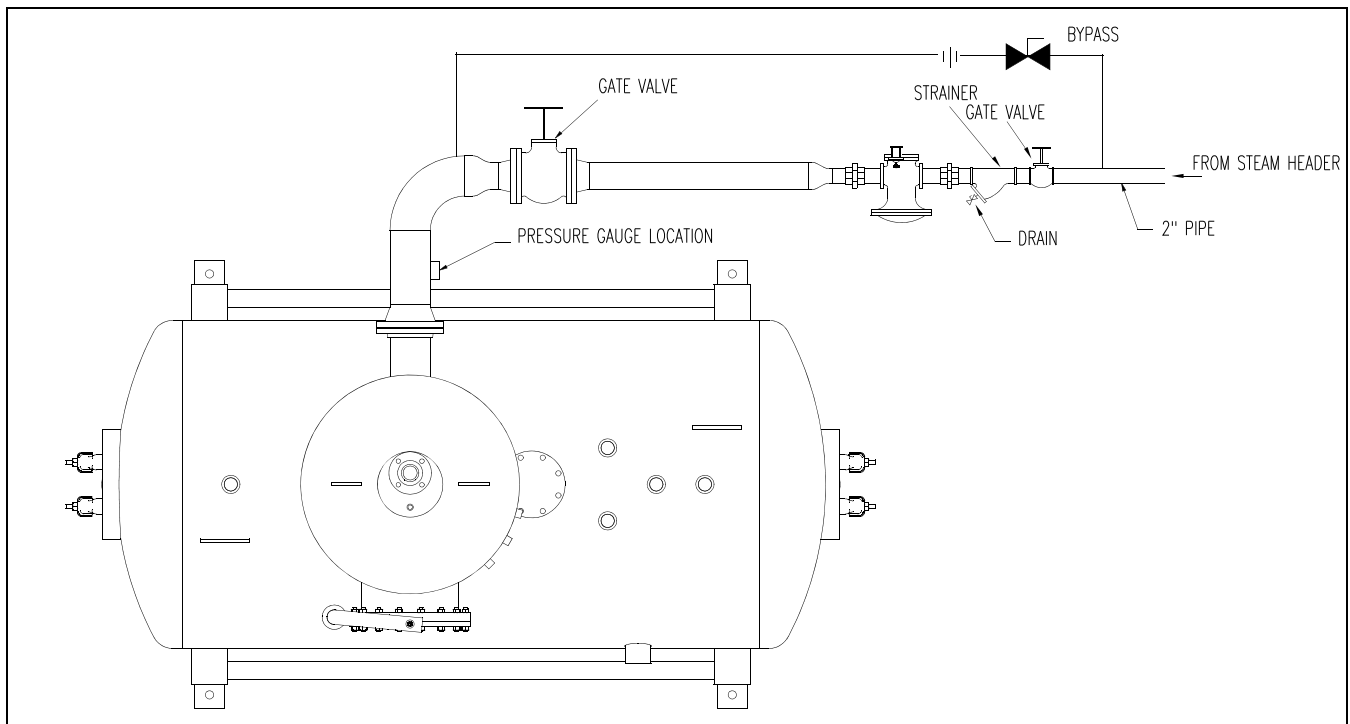


Figure 2-4 Steam Piping for Traymaster Deaerators

2.4. Vent Valve


The manual vent valve supplied with the deaerator has an orifice of a predetermined size drilled in its gate; since it is used for continuous venting, the discharge should be piped to atmosphere with no obstructions or resistance.

Continuous venting of the deaerator through the predetermined orifice valve is absolutely necessary for proper operation. Never replace this manual valve with a valve providing tight shutoff. The piping must be the same size as the valve. Contact your authorized Cleaver-Brooks representative for more information.

The automatic vent valve may be piped to the outside, although it does not necessarily have to be. This valve provides a faster means of venting should there be a sudden build up of gases.

Table 2-1 Vent Valves

Traymaster Model	Std Orifice Decimal	Std Orifice Fraction
TMP30	0.25	1/4
TMP45	0.3125	5/16
TMP70	0.375	3/8
TMP100	0.4375	7/16
TMP125	0.5	1/2
TMP140	0.5	1/2
TMP175	0.5625	9/16
TMP200	0.625	5/8
TMP225	0.6875	11/16
TMP250	0.6875	11/16
TMP300	0.75	3/4
TMP350	0.875	7/8
TMP400	1	1.0
TMP450	1	1.0
TMP500	1	1.0


Caution

Do not substitute or replace the vent valve. If there is any doubt, verify that the valve has a drilled gate prior to placing the unit into operation. The valve is normally in the closed position and vents a continuous flow of steam and gases through the orifice drilled into the gate.

2.5.PRV and Safety Relief Valve

Recommended piping for the steam pressure reducing valve (PRV) and safety relief valve is shown in Figures 2-5 and 2-6. PRV and relief valve are not furnished by Cleaver-Brooks.

IMPORTANT: The steam pressure reducing valve should be installed as near as practical to the deaerator tank. Installation should be made in accordance with instructions of the valve manufacturer. The downstream piping **MUST** be the same size as the tapping in the tank. The external control line **MUST** be installed to agree with the manufacturer's recommendation. These recommendations will ensure the correct volume of steam supplied to the deaerator.

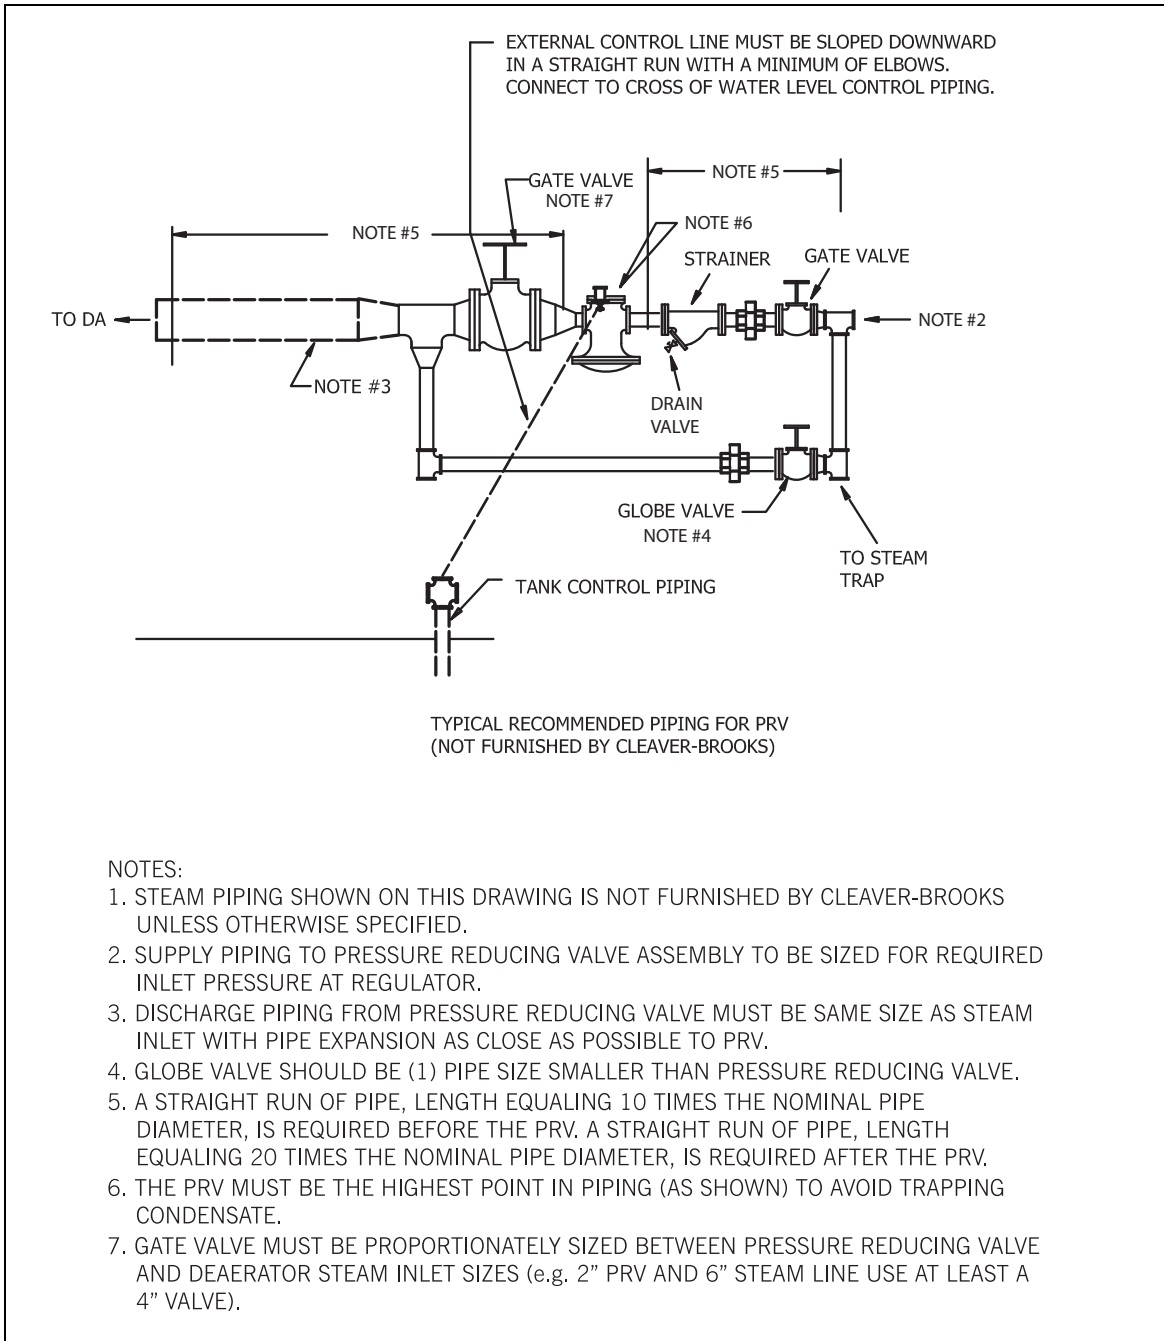


Figure 2-5 Recommended PRV Piping

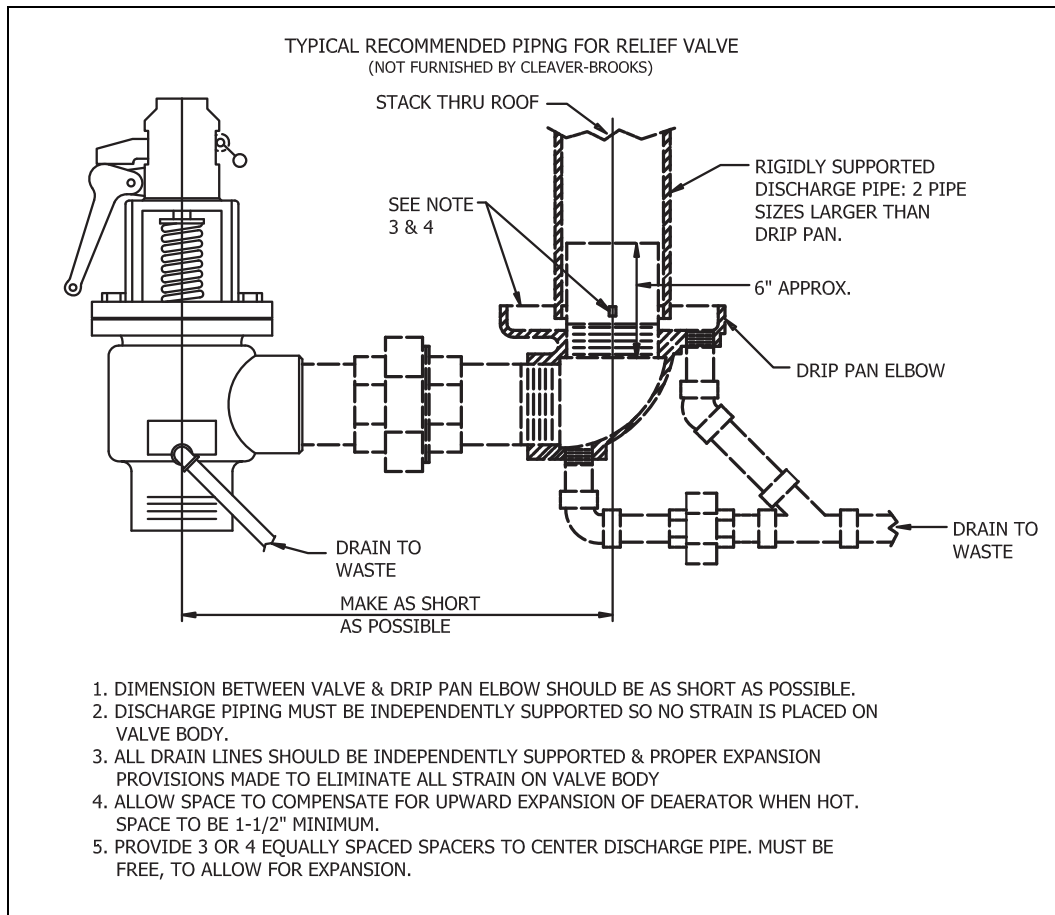


Figure 2-6 Recommended Safety Relief Valve Piping

2.6.Pumps

If a “packaged” type system was provided, the height of the deaerator storage tank above the boiler feed pumps will have been predetermined to obtain proper NPSH; this height must be adhered to and should never be lowered.

If a deaerator storage tank only was supplied by Cleaver-Brooks and the pumps by others, the tank must be mounted at a proper height above the pumps to avoid flashing and cavitation. The pump manufacturer’s recommendations must be followed.

Continuously operating centrifugal pumps must have a by-pass orifice in the discharge line ahead of the check valve. This orifice is shipped loose with all centrifugal pumps.

Turbine pumps should be protected by a relief valve in the discharge line when they operate against a feed water valve on the boiler.

Because of the various makes and models of pumps utilized with a deaerator, it is not practical to provide specific instructions in this manual. The manufacturer’s literature provided with the pump

should be referred to. It provides instructions for proper mounting, piping, and alignment; these recommendations should be followed.

When pumps are provided by Cleaver-Brooks as a part of the deaerator, care is taken to assure proper installation and alignment. It is extremely important, however, that alignment be rechecked prior to operation. A flexible coupling does not correct or compensate for any misalignment between the pump and the motor.

There are general instructions applicable to all pumps. Most of these are listed in the various manufacturer's literature, but they are worth repeating:

- Do not run the pump unless it is filled with liquid.
- Protect the pump from foreign particles, chips, scale, etc., using a suitable strainer installed in the suction line as near as possible to the pump.
- Suction and discharge piping must align and not be forced into position when assembling to a pump. All piping must be supported to assure that no stresses or strains are transmitted to the pump.
- Verify that all discharge piping is open at start-up.
- In general, do not introduce boiler feed compound through a feed pump.
- Lubricate all bearings in accordance with manufacturer's instructions. Remember that over greasing is harmful.
- When packed stuffing boxes are employed, adjustment will be required. Follow the manufacturer's recommendation. Do not over-tighten. Adjust the packing only while the pump is running. Some leakage is required for lubrication and 40 to 60 drops per minute should not be considered excessive.
- Be sure that the pump shaft turns freely by hand. If it does not, some corrective action is required.
- Be sure wiring is connected for correct rotation as marked on the pump casing. In some cases, the flexible coupling insert on a pump provided by Cleaver-Brooks is removed prior to shipment. It is tied to the coupling along with a precautionary tag advising that motor rotation be established and verified. Incorrect rotation of some types of pumps, even momentarily, can cause serious pump damage.

Check rotation by momentarily energizing the pump starters.

Discharge piping

Pipe, valves and fittings should be at least the same diameter as the discharge pipe or sized in accordance with good piping practices to reduce excessive fluid velocities and pipe friction losses. Pipe, valves and fittings must have a pressure rating equal to or greater than the maximum system pressure. It is recommended that the discharge piping be pressure checked to at least the maximum pressure the pump is capable of generating or as required by codes or local regulations. Operating pressure of the vessel must also be taken into consideration.

Whenever possible, avoid high pressure loss fittings, such as elbows or branch tees directly on either side of the pump. The piping should be adequately supported to reduce thermal and mechanical stresses on the pump. Good installation practice recommends the system be thoroughly cleaned and flushed of all foreign materials and sediment prior to pump installation. Furthermore, the pump should never be installed at the lowest point of the system due to the natural accumulation of dirt and sediment. If there is excessive sediment or suspended particles present, it is advised a strainer or filter be used. Grundfos recommends that pressure gauges be installed on inlet and discharge flanges or in pipes to check pump and system performance.

Check valves

A check valve may be required on the discharge side of the pump to prevent the pump's inlet pressure from being exceeded. For example, if a pump with no check valve is stopped because there is no demand on the system (all valves are closed), the high system pressure on the discharge side of the pump will "find" its way back to the inlet of the pump. If the system pressure is greater than the pump's maximum inlet pressure rating, the limits of the pump will be exceeded and a check valve needs to be fitted on the discharge side of the pump to prevent this condition.

Bypass

A bypass should be installed in the discharge pipe if there is any possibility the pump may operate against a closed valve in the discharge line. Flow through the pump is required to ensure adequate cooling and lubrication of the pump is maintained. Elbows should be a minimum of 12" from the orifice discharge to prevent erosion.

Motors

Pumps are supplied with heavy-duty 2-pole (3600 RPM nominal), ODP or TEFC, NEMA C frame motors selected to rigid specifications.

Motor protection

1. Single-Phase Motors:

With the exception of 10 HP motors which require external protection, single-phase CR pumps are equipped with multi-voltage, squirrel-cage induction motors with built-in thermal protection.

2. Three-Phase Motors

CR pumps with three-phase motors must be used with the proper size and type of motor-starter to ensure the motor is protected against damage from low voltage, phase failure, current imbalance and overloads. A properly sized starter with manual reset and ambient-compensated extra quick trip in all three legs should be used. The overload should be sized and adjusted to the full-load current rating of the motor. Under no circumstances should the overloads be set to a higher value than the full load current shown on the motor nameplate. This will void the warranty. Overloads for

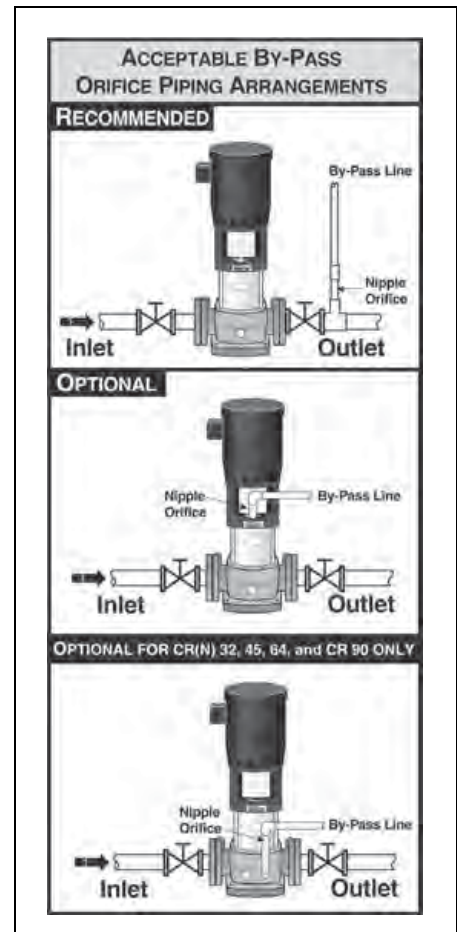


Figure 2-7

auto transformers and resistant starters should be sized in accordance with the recommendations of the manufacturer. Three phase MLE motors require only fuses as a circuit breaker. They do not require a motor starter. NOTE: Standard allowable phase imbalance difference is 5%.

⚠ Caution

The safe operation of this pump requires that it be grounded in accordance with the national electrical code and local governing codes or regulations.

Initial startup/priming

To prime the pump in a closed system or an open system where the water source is above the pump, close the pump isolation valve(s) and open the priming plug on the pump head. See **Figure 2-8**, **Figure 2-9**, and **Figure 2-10**. Gradually open the isolation valve in the suction line until a steady stream of airless water runs out the priming port. Close the plug and securely tighten. Completely open the isolation valves. For pumps with Cool-Top, see.

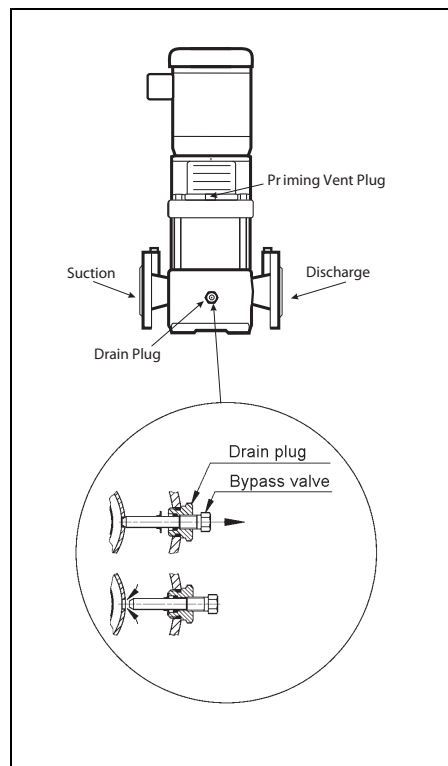


Figure 2-8 Drain Plugs

In open systems where the water level is below the pump inlet, the suction pipe and pump must be filled and vented of air before starting the pump. Close the discharge isolation valve and remove the priming plug. Pour water through the priming hole until the suction pipe and pump are completely filled with water. If the suction pipe does not slope downward from the pump toward the water level, the air must be purged while being filled. Replace the priming plug and securely tighten.

1. Switch power off.
2. Check to make sure the pump has been filled and vented.
3. Remove the coupling guard and rotate the pump shaft by hand to be certain it turns freely.
4. Verify that the electrical connections are in accordance with the wiring diagram on the motor.
5. Switch the power on and observe the direction of rotation. When viewed from the top, the pump should rotate counter-clockwise (clockwise for CRN-SF).

To reverse the direction of rotation, first switch OFF the supply power.

6. On three-phase motors, interchange any two power leads at the load side of the starter. On single-phase motors, see connection diagram on nameplate. Change wiring as required. 8. Switch on the power and again check for proper motor rotation. Once rotation has been verified, switch off power again. Do not attempt to reinstall the coupling guards with the motor energized. Replace the coupling guard if the rotation is correct. After guards are in place the power can be reapplied.

Note: CR, CRI, CRN 1s to 5: For these pumps, it is advisable to open the bypass valve (**Figure 2-8**) during start-up. The bypass valve connects the suction and discharge sides of the pump, thus making the filling procedure easier. When the operation is stable, the bypass valve must be closed.

REMINDER: Do not start the pump before priming or venting the pump. Never operate the pump dry.

Operating Parameters

CR multi-stage centrifugal pumps installed in accordance with these instructions and sized for correct performance will operate efficiently and provide years of service. The pumps are water-lubricated and do not require any external lubrication or inspection. The motors may require periodic lubrication as noted in the following Maintenance Section.

Under no circumstances should the pump be operated for any prolonged periods of time without flow through the pump. This can result in motor and pump damage due to overheating. A properly sized relief valve should be installed to allow sufficient water to circulate through the pump to provide adequate cooling and lubrication of the pump bearings and seals.

Pump Cycling

Pump cycling should be checked to ensure the pump is not starting more than: 20 times per hour on 1/3 to 5 HP models

15 times per hour on 7 1/2 to 15 HP models

10 times per hour on 20 to 60 HP models

Rapid cycling is a major cause of premature motor failure due to increased heat build-up in the motor. If necessary, adjust controls to reduce the frequency of starts and stops.

Boiler-feed installations

If the pump is being used as a boiler-feed pump, make sure the pump is capable of supplying sufficient water throughout its entire evaporation and pressure ranges. Where modulating control valves are used, a bypass around the pump must be installed to ensure pump lubrication (see “Minimum Continuous Duty Flow Rates”).

Freeze Protection

If the pump is installed in an area where freezing could occur, the pump and system should be drained during freezing temperatures to avoid damage. To drain the pump, close the isolation valves, remove the priming plug and drain plug at the base of the pump. Do not replace the plugs until the pump is to be used again. Always replace the drain plug with the original or exact replacement. Do not replace with a standard plug. Internal recirculation will occur, reducing the output pressure and flow.

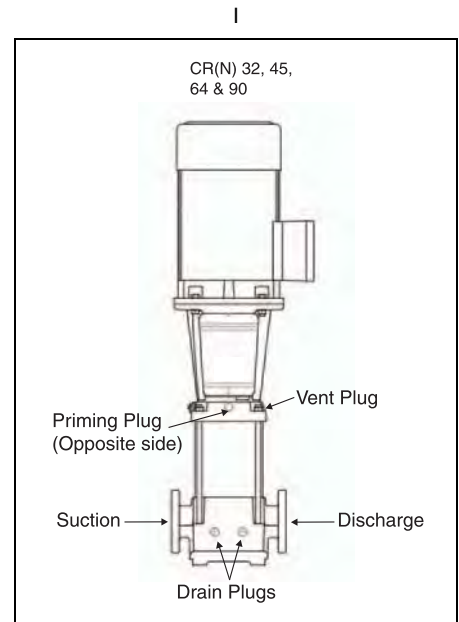


Figure 2-9 Drain Plugs

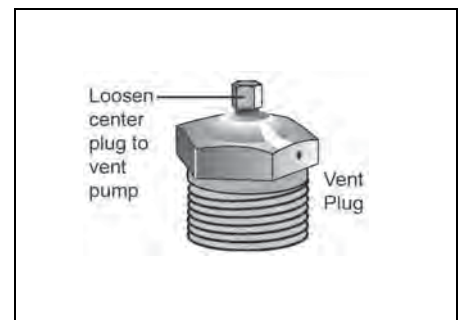


Figure 2-10 Vent Plug

Caution

Motors should not be run unloaded or uncoupled from the pump at any time; damage to the motor bearings will occur.




Pump Electrical Tests



Warning

When working with electrical circuits, use caution to avoid electrical shock. It is recommended that rubber gloves and boots be worn, and metal terminal boxes and motors are grounded before any work is done. For your protection, always disconnect the pump from its power before handling.

Table 2-2 Preliminary tests

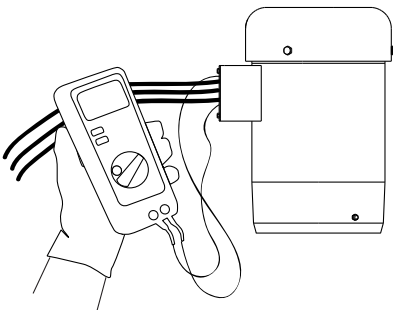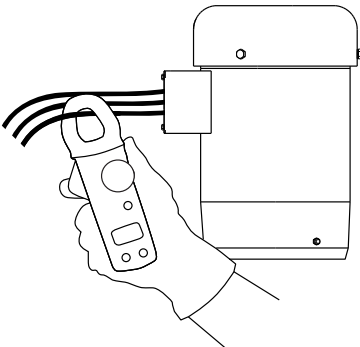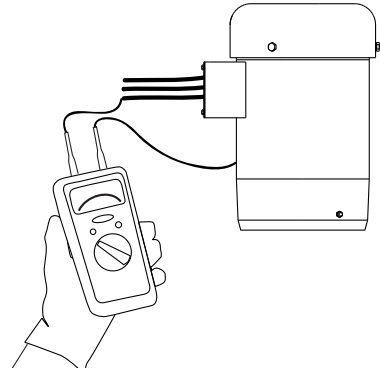Supply voltage	How to measure	What it means
	<p>Use a voltmeter, (set to the proper scale) measure the voltage at the pump terminal box or starter.</p> <p>On single-phase units, measure between power leads L1 and L2 (or L1 and N for 115 volt units). On three-phase units, measure between:</p> <ul style="list-style-type: none"> • Power leads L1 and L2 • Power leads L2 and L3 • Power leads L3 and L1 	<p>When the motor is under load, the voltage should be within $\pm 10\%$ of the nameplate voltage. Larger voltage variation may cause winding damage.</p> <p>Large variations in the voltage indicate a poor electrical supply and the pump should not be operated until these variations have been corrected.</p> <p>If the voltage constantly remains high or low, the motor should be changed to the correct supply voltage.</p>
	<p>Use an ammeter, (set on the proper scale) to measure the current on each power lead at the terminal box or starter. See the motor nameplate for amp draw information.</p> <p>Current should be measured when the pump is operating at constant discharge pressure.</p>	<p>If the amp draw exceeds the listed service factor amps (SFA) or if the current imbalance is greater than 5% between each leg on three-phase units, check the following:</p> <ol style="list-style-type: none"> 1. Burned contacts on motor starter. 2. Loose terminals in starter or terminal box or possible wire defect. 3. Too high or too low supply voltage. 4. Motor windings are shorted or grounded. Check winding and insulation resistances. 5. Pump is damaged causing a motor overload.
	<p>Turn off power and disconnect the supply power leads in the pump terminal box. Using an ohm or mega ohm meter, set the scale selector to Rx 100K and zero adjust the meter.</p> <p>Measure and record the resistance between each of the terminals and ground.</p>	<p>Motors of all HP, voltage, phase and cycle duties have the same value of insulation resistance. Resistance values for new motors must exceed 1,000,000 ohms. If they do not, motor should be repaired or replaced.</p>

2.7.High Water Alarm

Warning

To prevent electrical shock, turn off the electrical power before making electrical connections.

Failure to follow this warning could cause electrical shock, an explosion and/or a fire, which could result in property damage, personal injury or death.

Electrical Wiring

TOOLS NEEDED: One (1) flathead screwdriver.

Cover Removal and Installation Procedure

Using a flathead screwdriver, remove the one

(1) screw that secures the switch cover.

Place the cover on the switch housing and, using a flathead screwdriver, tighten the one

(1) screw to approximately 2 ft-lb. (2.6 Nm).

a. The No. 2 switch can be positioned with the conduit opening facing toward or away from the float chamber. These are the only positions in which the switch will function properly.

See drawing at right.

b. On initial fill-up, push the 2M manual reset button after the proper water level is reached to energize the burner. If a low water condition occurs and the water level has been restored, push the reset button to energize the burner.

c. Follow the wiring diagrams below to wire the No. 2 Switch. Terminals C and NC are the low water cut-off switch. Terminals C and NO are alarm switch. If the electrical load exceeds the rating of the switch, use an auxiliary relay or motor starter.

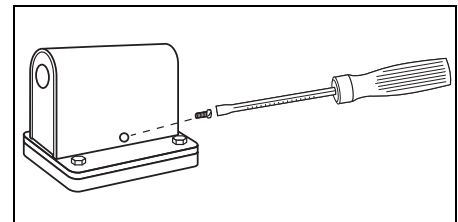


Figure 2-11 Cover Removal

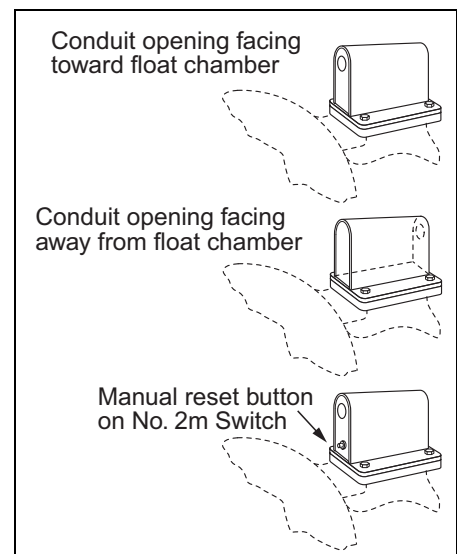


Figure 2-12

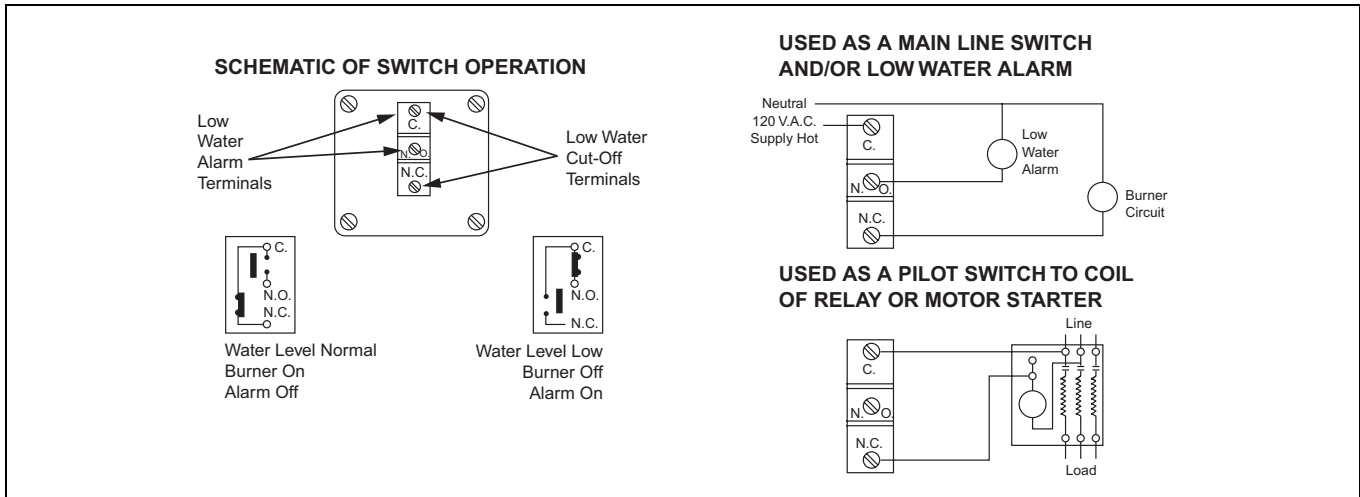


Figure 2-13

Testing

Control can be tested on a deaerator by gently inserting a screwdriver or similar tool in the test opening below the switch (see drawing) and lifting linkage to cause float to drop, thereby simulating a low water condition.

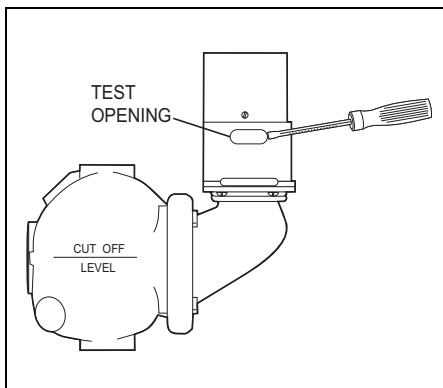


Figure 2-14 MM 63 Testing

2.8. Low Water Alarm and LW Cutoff Series 64 McDonnell & Miller

Cover

Using a flathead screwdriver, remove the one (1) screw that secures the switch cover (Fig. 2-15).

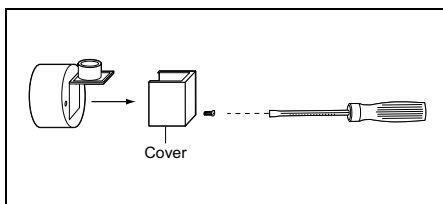



Figure 2-15 Switch Cover

Switch Operation

The No. 11 switch can be identified by a black terminal panel. The switch contains two (2) single pole single throw switches to control the water feeder and the low water cut-off. The low water cut-off switch is between terminals marked 1 and 2. A second switch is located between terminals marked 3 and 4.

This can be used to operate a low water alarm.

 **Warning**

To prevent electrical shock, turn off the electrical power before making electrical connections. Failure to follow this warning could cause electrical shock, an explosion and/or a fire, which could result in property damage, personal injury or death.

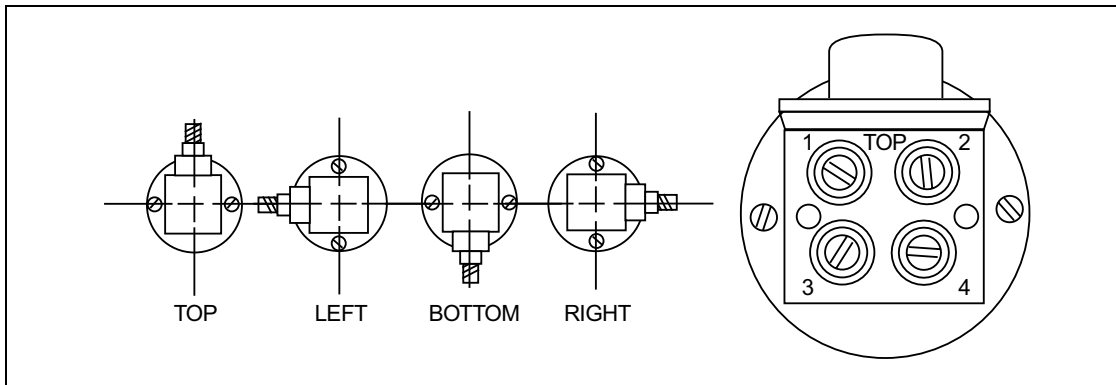


Figure 2-16 Switch Orientation

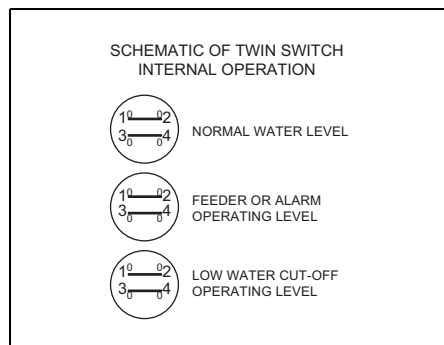


Figure 2-17

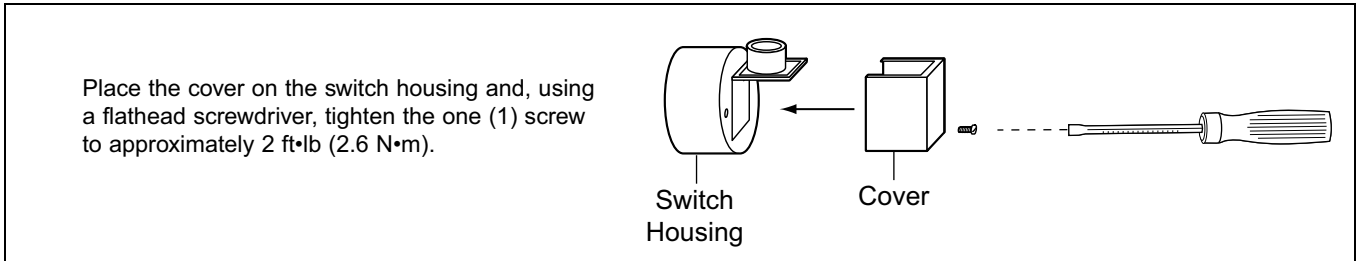


Figure 2-18 Replace Cover

Water Level Control Series 94 McDonnell & Miller

Wiring Diagrams

Note: The following diagrams are provided for reference only. If available, manufacturers wiring diagrams should always be followed to connect the device being operated.

⚠ Caution

To prevent electrical shock, turn off the electrical power before making electrical connections. Failure to follow this warning could cause electrical shock, an explosion and/or a fire, which could result in property damage, personal injury or death.

Red switch terminals 1 and 2 are for burner circuit contacts, terminals 3 and 4 are for the low level alarm circuit contacts.
Blue switch terminals 3 and 4 are for feeder/pump control contacts, terminals 1 and 2 are for high level alarm circuit contacts.

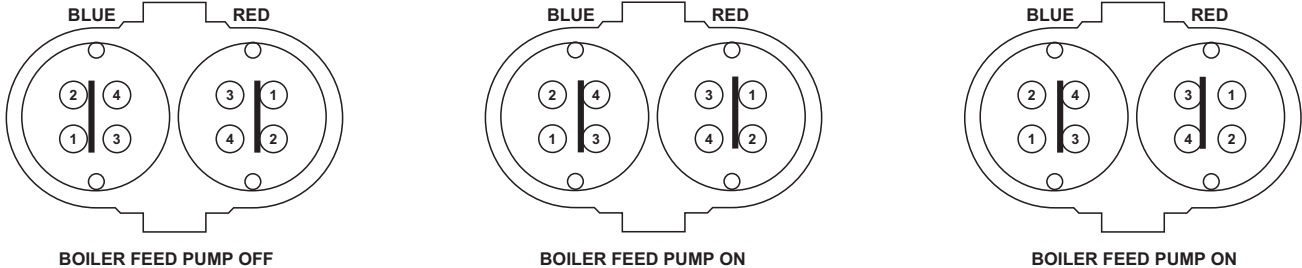


Figure 2-19

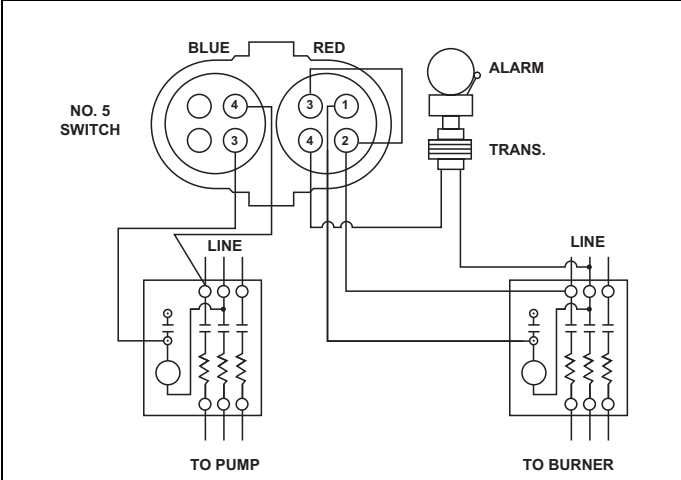


Figure 2-20

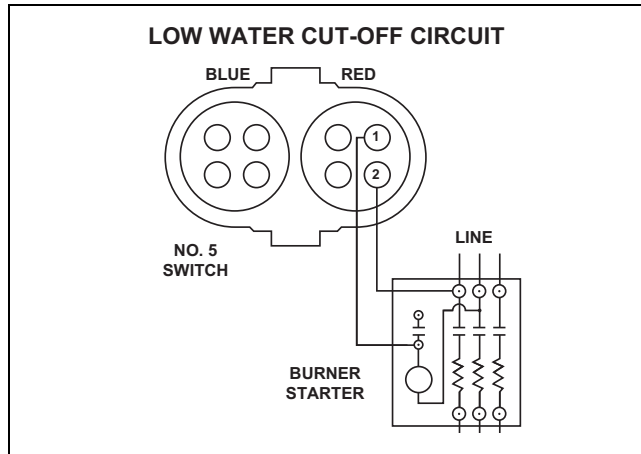


Figure 2-21 Low Water Cut-Off Only

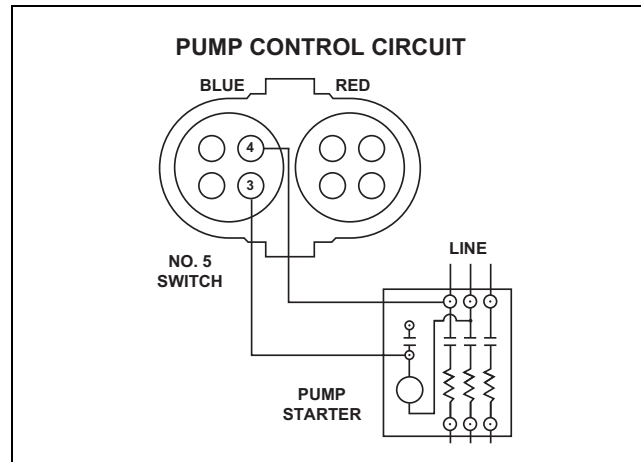


Figure 2-22 Pump Control Only


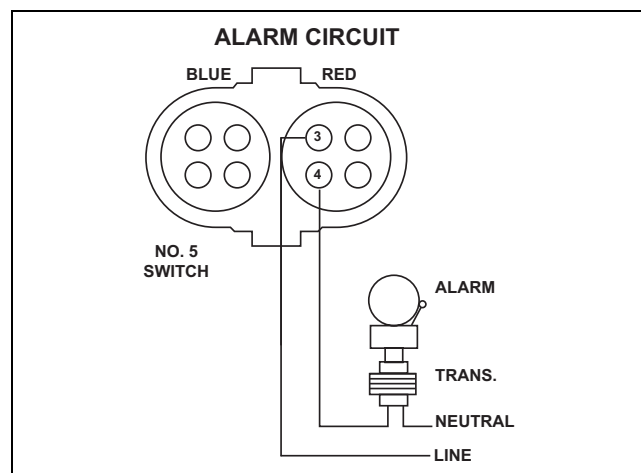


Figure 2-23 Low Water Alarm Only

Red terminals 3 and 4 are the burner circuit contacts, terminals 1 and 2 are the low level alarm circuit contacts.

Blue terminal 3 is the common contact, terminals 1 and 4 are the output contacts.

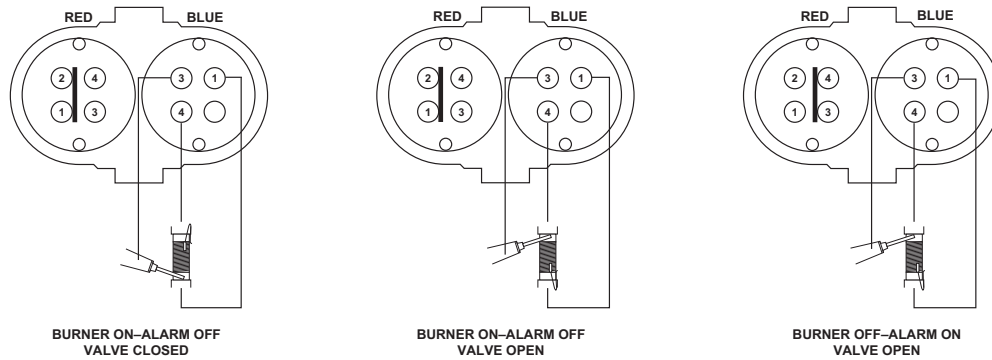

NOTE: The 7B switch is a 135 ohm potentiometer slide wire control for use with an electric valve operator with the same rating.

Figure 2-24 Series 93/193 or 94/194 with 7B or 7B-M

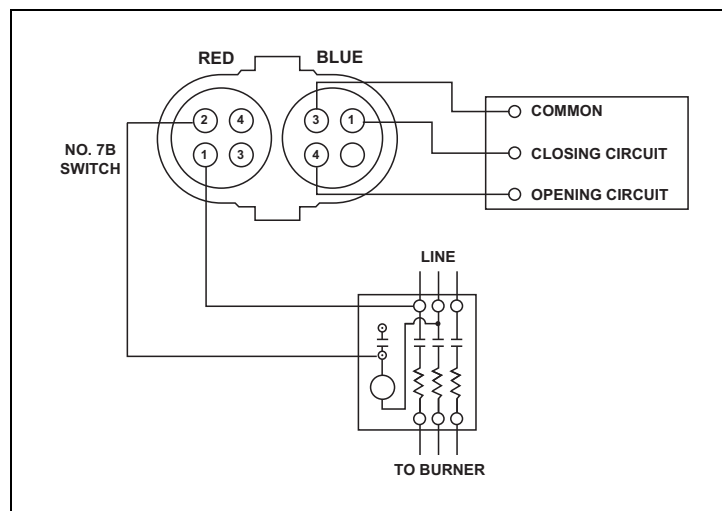


Figure 2-25 Proportional Control, Low Water Cut-Off and Alarm

Overflow Trap

Deaerator tanks with steam blankets produce additional liquid as the steam condenses. The Overflow Trap traps and relieves this condensate and overflow without the steam blanket escaping. Buoyancy of its float ball provides force to operate internal valve assembly to relieve condensate and overflow to drain. Features steel chamber, brass/bronze internal valve, 316 stainless steel float ball. Sizes 1" through 2" with NPT connections, and 3" through 6" with 150FLG Large end cover provides easy access to internal valve assembly.

As condensate/overflow enters the overflow trap the level of the liquid in the float chamber increases. For small amounts of liquid the float ball lifts the pilot assembly away from the piston disc and the liquid is relieved through the hole in the center of the piston disc. For large volumes of liquid the piston disc lifts off its seat in the valve body. The liquid then passes under the piston disc to the drain.

The overflow trap should be installed in an upright position.

OVERFLOW TRAP	
Drainer Size	Capacity in lb/hr
1"	10,000
2"	45,000
3"	78,500
4"	138,000
6"	293,000
Based on differential of 5 psi	



Section 3

Startup and Operation

Commissioning / Initial Startup	3-2
Operation and Adjustments	3-2

3.1.Commissioning / Initial Startup

Open the gauge glass shut-off cocks and the vent cock on the drainer. The manual vent valve may be opened to provide faster venting. Open the valves in the supply line to the steam pressure regulator and close the by-pass valve.

If the boiler is empty and will be filled from this tank, close the pump discharge shut-off valve. Be sure that the pump is turned off.

Start water flow, but at a controlled rate so that capacity of the deaerator is not exceeded.

Notice

All supply water to the deaerator must be limited to the maximum capacity of the deaerator whether the source be from a condensate pump, a transfer pump, or a city water supply. This is usually accomplished by manual adjustment of a control valve in the discharge line. *This adjustment is of extreme importance to proper operation.*

When the correct water level is reached, open the pump valves and start the feed water pump to fill the boiler. Observe the water level during this process to assure that the pump does not run dry.

Fire the boiler and bring it up to operating pressure in accordance with good practice and the boiler manufacturer's recommendations.

When normal operating pressure is obtained, adjust the steam pressure reducing valve to provide 5 psig within the tank.

Close the vent cock on the drainer when steam begins to flow from it.

If the manual vent valve was opened, it should now be closed to provide the desired rate of venting. The orifice in the valve gate will provide a predetermined and sufficient vent rate.

Be sure that the orifice vent valve supplied with the unit is installed.

3.2.Operation and Adjustments

For deaeration to occur, it is necessary to raise the temperature of the incoming water to a point where oxygen and carbon dioxide are released from the water. This is accomplished by spraying the water into a steam filled chamber and through a spray of high velocity steam.

Suitable deaeration will take place if the operating pressure within the tank is maintained at 5 psig and 227° F.

NOTE: 227° F is the saturation temperature of steam at 5 psig. Although operation is possible with steam pressures ranging from 2 to 15 psig, 5 psig is the recommended operating pressure.

There are relatively few adjustments required. However, it is important that these adjustments be made under normal load conditions.

It is necessary to control the volume of water entering the deaerator in relation to the inlet water temperature and to stay within the heat limitation of the steam flow. Failure to maintain the desired operating pressure and temperature can generally be attributed to either too much inlet water or too little steam.

The modulating make-up valve size is predicated on the total load and the inlet water pressure. This determines the maximum flow capacity (GPM) at a given supply pressure. When the valve is sized on the basis of accurate data, it will be close to, or slightly above, the maximum requirement. Depending upon conditions, it may be necessary to throttle the flow of water to the make-up valve. This requires a control valve (globe type) or possibly a pressure reducing valve. This valve may be provided with the system, or it may be provided by others.

When throttling is necessary, an initial adjustment made when the deaerator is operating at capacity is normally sufficient. Manually adjust the control valve so that a fairly stable water level will be maintained under the maximum load. The make-up valve will modulate to maintain a relatively constant level under other load conditions.

Always observe the water level in the gauge glass and make any necessary re-adjustment to maintain the desired level.

If the flow of “cool” water is too great, it will quickly condense the incoming steam making it difficult to maintain the desired pressure and temperature.

If the flow is insufficient, due to over-throttling the control valve, or from lower than anticipated water pressure, it is possible for low water to occur. This can cause pump cavitation – possibly damaging the pump – and eventual deaerator shut down.

When the water flow is established under normal load conditions, adjust the steam pressure regulator to maintain a 5 psig pressure within the tank. Adjustment should be performed in accordance with the recommendation of the regulator manufacturer.

Once the unit has leveled out under normal operating conditions and the liquid level control is operating automatically, operation is essentially automatic. No further adjustments should be required unless there is a change in operating conditions. Log book recording of all pressures and temperatures on a daily basis will alert operating personnel to deviations and the need for adjustments.

If adjustments to make-up or steam flows are necessary during normal operation, make the adjustments smoothly in small increments in order to maintain a good heat balance.

Normally there are no re-adjustments required when beginning from a cold start, for example after a week-end shut down.

For a normal shut down, such as a week-end, it is usually only necessary to secure the necessary supply, drain, or shut-off valves and the pumps. Depending upon the installation, it may be advisable to turn off the boiler feed pump during this shut down and to close the pump discharge valve. This will help prevent any

vacuum caused by the cooling boiler water from pulling water from the deaerator, or from draining water from an elevated tank to equalize water levels between the boiler and the tank, or to possibly flood the boilers.

Before resuming operation, verify that all valves are returned to their normal operating position.

Depending upon conditions, ambient temperature, length of shut down, etc. the water temperature in the deaerator tank may have cooled considerably. Because of the advantage of feeding hot deaerated water to the boiler as soon as possible, it may be desirable to speed up heating of the water more quickly than normal operation will accomplish. This can be done as soon as steam is available by manually operating the drain valve to dump water so that make-up water and steam will enter. Care must be taken not to overload the system or to starve the pump. When the desired operating temperature and pressure are obtained be sure to tightly shut the drain valve.

During shut downs, especially seasonal or extended periods, chemical treatment of the water in the deaerator is required. Your feedwater consultant's recommendations regarding the use of an oxygen scavenger should be followed.



Section 4
Maintenance

General Maintenance 4-2
Pumps 4-4
Water Level Controls 4-9
Overflow Trap 4-10

4.1. General Maintenance

Cleaver-Brooks equipment is designed, engineered, and built to provide long life and excellent service on the job. Good operating practices and conscientious maintenance and care will obtain efficiency and economy from their operation and contribute to long years of performance.

A well planned maintenance program avoids unnecessary down time or costly repairs, promotes safety, and aids boiler code and local inspectors. An inspection schedule with a listing of procedures should be established. It is recommended that a boiler room log, or record, be maintained. Recording of daily, weekly, monthly and yearly maintenance activities provides a valuable guide and aids in obtaining economies and length of service from Cleaver-Brooks equipment.

Even though the deaerator has electrical and mechanical devices that make it operate automatically, these devices require systematic and periodic maintenance. Any “automatic” features do not relieve the operator from responsibility, but rather free him of some repetitive chores, providing time to devote to maintenance.

Only trained and authorized personnel should be permitted to operate, adjust or repair the boiler and its related equipment.

Good housekeeping helps maintain a professional appearing boiler room. The boiler room should be kept free of all material and equipment not necessary to the operation of the boiler or heating system.

Alertness in recognizing unusual noises, improper gauge reading, leaks, etc., can make the operator aware of a developing malfunction, permitting prompt corrective action that may prevent extensive repairs or unexpected down time. Any steam, water or fuel leaks should be repaired as soon as they are noticed. These are wasteful as well as hazardous. Include in the program preventive maintenance measures such as regularly checking the tightness of connections, locknuts, setscrews, packing glands, etc.

Insurance regulations or local laws may require a periodic inspection of the pressure vessel by an authorized inspector.

Inspections of this type are usually, though not necessarily, scheduled for periods of normal boiler down time such as an off season. This major inspection can often be used to accomplish maintenance, replacements, or repairs that cannot easily be done at other times. This also serves as a good basis for establishing a schedule for annual, monthly, or other periodic maintenance programs.

While this inspection pertains primarily to the waterside and fireside surfaces of the boiler, it provides an excellent opportunity for detailed inspection and checking of all components of the system including piping, valves, pumps, gaskets, softener, etc. Comprehensive cleaning, spot painting or re-painting, and the replacement of expendable items, should be planned for and taken care of during this time. Any major repairs or replacements that may

be required should also, if possible, be coordinated with this period of boiler shutdown.

Replacement spare parts, if not on hand, should be ordered sufficiently prior to shutdown.

Trays are subject to scale buildup if the water being used is high in hardness or alkalinity. Routine inspection and cleaning are recommended. A hinged door in the tray column provides access to the tray box. The tray box itself has a door fastened with sash pins for easy access.

In the event there is an accumulation of sediment, sand, gravel, etc. in the bottom of the tank, it should be removed, analyzed, and an effort made to eliminate the source.

Should scale be present, the method of cleaning, either mechanical or chemical, will be governed by the composition of the scale and its location. If cleaning is required, it is suggested that the cleaning problem be referred to a company that is versed in this type of cleaning. They will be able to determine the composition of the scale and will select the proper chemicals to be employed in the cleaning process.

Periodic checks for water softness should be maintained. If hardness exceeds three grains per gallon, a water softener should be used to prevent build up of mineral deposits on the internal parts of the deaerator.

The water spray nozzle is of the self-cleaning type. Clogging or wearing seldom occurs, however, it is a possibility that should be checked in the event problems are encountered. This is a spring-loaded valve and it is factory pre-set. Should disassembly or adjustment become necessary, tighten the spring with the spray disc closed, compressing it 3/16". Be sure that the jam nut locks tightly against the adjusting nut.

Float-operated controls should be blown down or drained routinely to assure against build up of sediment that may interfere with their function. It is suggested that the heads be removed for visual inspection during the annual boiler inspection. At the same time, remove the pipe plugs from the tees or crosses to verify that the cross connecting piping is clean and free of obstructions. Controls must be mounted in a plumb position for proper performance. Determine that piping is vertically aligned after shipment and installation, and throughout life of equipment.

The water gauge glass should be kept clean. Check while cool for etching thinning or damage. If any deterioration is found, replace glass immediately to avoid the possibility of breakage in service. The glass should be replaced periodically as part of the maintenance program. Always use new gaskets when replacing a glass. Do not over tighten water gauge glass fittings. Check try-cocks and gauge cocks for freedom of operation and clean as required. Proper alignment of gauge glass cocks is essential to prevent mechanical strain on the glass.

Check and clean all drain valves.

Strainers in all lines should be cleaned at regular intervals determined by conditions and usage.

Where applicable, refer to manufacturer's literature for service recommendations on specific components.

4.2.Pumps

Pump Maintenance

At regular intervals depending on the conditions and time of operation, the following checks should be made:

1. Pump meets required performance and is operating smoothly and quietly.
2. There are no leaks, particularly at the shaft seal.
3. The motor is not overheating.
4. Remove and clean all strainers or filters in the system.
5. Verify the tripping of the motor overload protection.
6. Check the operation of all controls. Check unit control cycling twice and adjust, if necessary.
7. If the pump is not operated for unusually long periods, the unit should be maintained in accordance with these instructions. In addition, if the pump is not drained, the pump shaft should be manually rotated or run for short periods of time at monthly intervals.
8. To extend the pump life in severe duty applications, consider performing one of the following actions:
 - Drain the pump after each use.
 - Flush the pump, through system, with water or other fluid that is compatible with the pump materials and process liquid.
 - Disassemble the pump liquid components and thoroughly rinse or wash them with water or other fluid that is compatible with the pump materials and process liquid.

If the pump fails to operate or there is a loss of performance, refer to the Troubleshooting Section.

Motor Replacement

If the motor is damaged due to bearing failure, burning or electrical failure, the following instructions detail how to remove the motor for replacement. It must be emphasized that motors used on CR pumps are specifically selected to our rigid specifications.

Replacement motors must be of the same frame size, should be equipped with the same or better bearings and have the same service factor. Failure to follow these recommendations may result in premature motor failure.

Disassembly

1. Turn off and lock out power supply. The power supply wiring can not be safely disconnected from the motor wires.
2. . Remove the coupling guards.

CR 1s, 1, 3, 5, 10, 15, and 20: do not loosen the three shaft seal securing allen screws.

3. Using the proper metric Allen wrench, loosen the four cap screws in the coupling. Completely remove coupling halves. On CR1s-CR20, the shaft pin can be left in the pump shaft. CR(N)32, 45, 64 and 90 do not have a shaft pin.
4. With the correct size wrench, loosen and remove the four bolts which hold the motor to the pump end.
5. Lift the motor straight up until the shaft has cleared the motor stool.

Assembly

1. Remove key from motor shaft, if present, and discard.
2. Thoroughly clean the surfaces of the motor and pump end mounting flange. The motor and shaft must be clean of all oil/grease and other contaminants where the coupling attaches. Set the motor on the pump end.
3. Place the terminal box in the desired position by rotating the motor.
4. Insert the mounting bolts, then diagonally and evenly tighten. For 3/8" bolts (1/2 to 2 HP), torque to 17 ft.-lbs., for 1/2" bolts (3 to 40 HP) torque to 30 ft.-lbs., and for 5/8" bolts (50 - 60 HP) torque to 59 ft.-lbs.

CR 1s, 1, 3, and 5:

Insert shaft pin into shaft hole. Reinstall the coupling halves onto shaft and shaft pin. Reinstall the coupling screws and leave loose. Check that the gaps on either side of the coupling are even, and that the motor shaft keyway is centered in the coupling half, as shown in **Figure 4-2**. Tighten the screws to the correct torque.

CR 10, 15 and 20:

Insert shaft pin into shaft hole. Insert plastic shaft seal spacer beneath shaft seal collar. Reinstall the coupling halves onto shaft

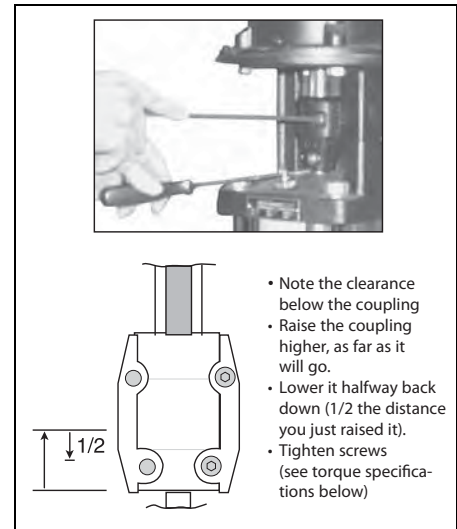


Figure 4-1

Torque Specifications	
CR(I)(N) 1s, 1, 3, 5, 10, 15, and 20 CR(N) 2, 4, 8, and 16	
Coupling Bolt Size	Min. Torque Specifications
M6	10 ft.-lbs.
M8	23 ft.-lbs.
M10	46 ft.-lbs.

and shaft pin. Reinstall the coupling screws and leave loose. Check that the gaps on either side of the coupling are even and that the motor shaft key way is centered in the coupling half, as shown in **Figure 4-2**. Tighten the screws to the correct torque. Remove plastic shaft seal spacer and hang it on inside of coupling guard.

CRT 2, 4, 8 and 16:

Reinstall coupling halves. Make sure the shaft pin is located in the pump shaft. Put the cap screws loosely back into the coupling halves. Using a large screwdriver, raise the pump shaft by placing the tip of the screwdriver under the coupling and carefully elevating the coupling to its highest point (**Figure 4-1**). Note: the shaft can only be raised approximately 0.20 inches (5mm). Now lower the shaft half way back down the distance you just raised it and tighten the coupling screws (finger tight) while keeping the coupling separation equal on both sides. When the screws are tight enough to keep the couplings in place, then torque the screws evenly in a criss-cross pattern.

CR(N) 32, 45, 64 & CR90:

Place the plastic adjustment fork under the cartridge seal collar (see **Figure 4-3**).

Fit the coupling on the shaft so that the top of the pump shaft is flush with the bottom of the clearance chamber in the coupling (see **Figure 4-3**).

Lubricate the coupling screws with an anti-seize and lubricating compound. Tighten the coupling screws (finger tight) while keeping the coupling separation equal on both sides and the motor shaft keyway centered in the coupling half as shown in **Figure 4-1**.

When the screws are tight enough to keep the couplings in place, then torque the screws evenly in a crisscross pattern.

Torque coupling screws to 62 ft.-lbs. Remove the adjustment fork from under the cartridge seal collar and replace it to the storage location (see **Figure 4-4**).

5. Check to see that the gaps between the coupling halves are equal. Loosen and readjust, if necessary.

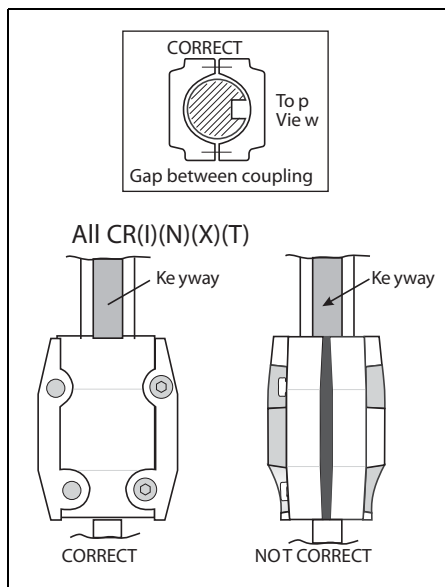


Figure 4-2

6. Be certain the pump shaft can be rotated by hand. If the shaft cannot be rotated or it binds, disassemble and check for misalignment.
7. Prime the pump.
8. Follow the wiring diagram on the motor label for the correct motor wiring combination which matches your supply voltage. Once this has been confirmed, reconnect the power supply wiring to the motor.
9. Check the direction of rotation, by bump-starting the motor. Rotation must be left to right (counter-clockwise) when looking directly at the coupling.
10. Shut off the power, then re-install the coupling guards. After the coupling guards have been installed the power can be turned back on.

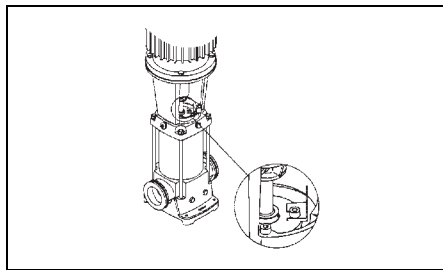


Figure 4-4

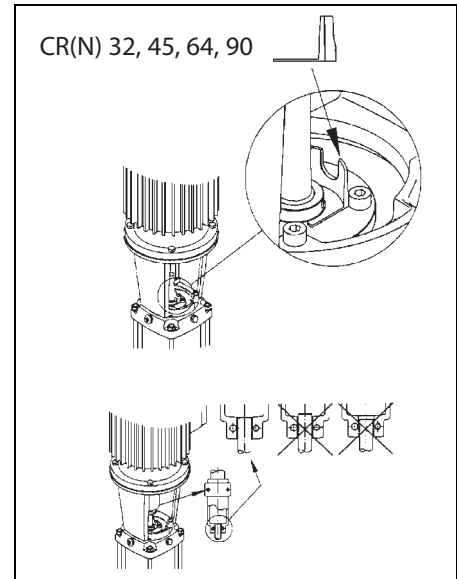


Figure 4-3

Motor Inspection

Inspect the motor at regular intervals, approximately every 500 hours of operation or every three months, whichever occurs first. Keep the motor clean and the ventilation openings clear. The following steps should be performed at each inspection:

1. Check that the motor is clean. Check that the interior and exterior of the motor is free of dirt, oil, grease, water, etc. Oily vapor, paper, pulp, textile lint, etc. can accumulate and block motor ventilation. If the motor is not properly ventilated, overheating can occur and cause early motor failure.
2. Use an Ohmmeter periodically to ensure that the integrity of the winding insulation has been maintained. Record the Ohmmeter readings. Immediately investigate any significant drop in insulation resistance.
3. Check all electrical connectors to be sure that they are tight.

Motor Lubrication

Electric motors are pre-lubricated at the factory and do not require additional lubrication at start-up. Motors without external grease fittings have sealed bearings that cannot be re-lubricated. Motors

Warning

Do not touch electrical connections before you first ensure that power has been disconnected. Electrical shock can cause serious or fatal injury. Only qualified personnel should attempt installation, operation, and maintenance of this equipment.

with grease fittings should only be lubricated with approved types of grease. Do not over-grease the bearings. Over greasing will cause increased bearing heat and can result in bearing/motor failure. Do not mix petroleum grease and silicon grease in motor bearings.

Bearing grease will lose its lubricating ability over time, not suddenly. The lubricating ability of a grease (over time) depends primarily on the type of grease, the size of the bearings, the speed at which the bearings operate and the severity of the operating conditions. Good results can be obtained if the following recommendations are used in your maintenance program. It should also be noted that pumps with more stages, pumps running to the left of the performance curve, certain pump ranges may have higher thrust loads. Pumps with high thrust loads should be greased according to the next service interval level.

If pump is fitted with a bearing flange that requires grease, see the stickers on either the bearing flange or coupling guards for proper grease type and greasing schedule.

Motor Lubrication Schedule (for Motors with Grease Nipples)

New motors that have been stored for a year or more should be regreased.

Table 4-1 Motor Lubrication Schedule


NEMA/(IEC) Frame Size	Standard Service Interval	Severe Service Interval	Extreme Service Interval	Weight of Grease to Add Oz./ (Grams)	Volume of Grease to Add In ³ /(Teaspoons)
Up through 210 (132)	5500 hrs.	2750 hrs.	550 hrs.	0.30 (8.4)	0.6 (2)
Over 210 through 280 (180)	3600 hrs.	1800 hrs.	360 hrs.	0.61 (17.4)*	1.2 (3.9)*
Over 280 up through 360 (225)	2200 hrs.	1100 hrs.	220 hrs.	0.81 (23.1)*	1.5 (5.2)*
Over 360 (225)	2200 hrs.	1100 hrs.	220 hrs.	2.12 (60.0)*	4.1 (13.4)*

Procedure:

1. Clean all grease fittings. If the motor does not have grease fittings, the bearing is sealed and cannot be greased externally.
2. If the motor is equipped with a grease outlet plug, remove it. This will allow the old grease to be displaced by the new grease.
3. If the motor is stopped, add the recommended amount of grease. If the motor is to be greased while running, a slightly greater quantity of grease will have to be added.

Note: If new grease does not appear at the shaft hole or grease outlet plug, the outlet passage may be blocked. At the next service interval the bearings must be repacked. Add grease SLOWLY taking approximately one minute until new grease appears at the shaft hole in the end plate or grease outlet plug. Never add more than 1-1/2 times the amount of grease shown in the lubrication schedule.

4. For motors equipped with a grease outlet plug, let the motor run for 20 minutes before replacing the plug.

 **Caution**

To avoid damage to motor bearings, grease must be kept free of dirt. For an extremely dirty environment, contact Grundfos, the motor manufacturer or an authorized service center for additional information. Mixing dissimilar grease is not recommended.

4.3. Water Level Controls

Series 63 McDonnell & Miller

Maintenance Schedule:

- Blow down control as follows when the deaerator is in operation:

Steam: Daily if operating pressure is above 15 psi.

Weekly if operating pressure is below 15 psi.


Hot Water: Quarterly

Note: More frequent blowdown may be necessary due to dirty water and/or local codes.

- **Disassemble and inspect annually. Replace the low water cut-off if it is worn, corroded, or if components no longer operate properly.**
- **Inspect the float chamber and equalizing piping annually. Remove all sediment and debris.**
- **Replace head mechanism every 5 years.** More frequent replacement may be required when severe conditions exist such as rapid switch cycling, surging water levels, and use of water treatment chemicals.
- **We recommend head mechanism replacement when the switch(es) no longer operate properly.** If you choose to replace the switch(es), order the proper McDonnell & Miller replacement switch or switch assembly and follow the Repair Procedure provided.

Blowdown procedure:

1. Blow down the low water cut-off when the water level is at its normal level and the burner is on. **Slowly** open the blowdown valve until it is fully open and observe the water level fall in the gauge glass. Close the valve after verifying that the pump contacts have closed and the burner shuts off. If this does not happen, immediately shut off the deaerator and correct the problem.

 **Caution**

To prevent serious personal injury from steam pipe blowdown, connect a drain pipe to the control opening to avoid exposure to steam discharge. Failure to follow this caution could cause personal injury.

Series 64 McDonnell & Miller

Maintenance Schedule:

- Blow down weekly during heating season.
- Open up float chamber and clean annually.

More frequent cleaning may be necessary if there are high make-up water requirements or poor local water quality.

Replace control every 10 years.

Series 93/193 McDonnell & Miller

Maintenance Schedule:

- **Blow down daily when the deaerator is in operation.** Control should be blown down daily to flush accumulation of sediment from float chamber and verify operation of switches.
- **Remove head assembly and inspect waterside components annually.** Replace head assembly if any of the internal components are worn, corroded or damaged or if control no longer operates properly.
- **Inspect the float chamber and equalizing piping annually.** Remove all sediment and debris.
- **Replace head mechanism every 5 years.** More frequent replacement may be required when severe conditions exist such as rapid switch cycling, surging water levels, and use of water treatment chemicals.
- **Replace unit every 15 years.** More frequent replacement may be required when severe conditions exist.

Blowdown Procedure:

Blow down the control when the water level is at its normal position and the burner is on. **Slowly** open the blowdown valve until it is fully open and observe the water level fall in the gauge glass. Close the valve after verifying that the pump contacts have closed and the burner shuts off. If the pump does not turn on and burner turn off when water level is lower, immediately shut off power to the pump and deaerator and correct the problem.

Caution

To prevent serious personal injury from steam pipe blowdown, connect a drain pipe to the control opening to avoid exposure to steam discharge. Failure to follow this caution could cause personal injury.

4.4.Overflow Trap

The inlet and outlet of the overflow trap must be kept unblocked. The internal valve assembly must be kept free of debris, deposits, and dirt. The internal valve assembly should move freely.



Section 5 Troubleshooting

Deaerator Troubleshooting - General	5-2
Pumps	5-3
High Water Alarm Series 63 McDonnell & Miller	5-5
Low Water Cutoff Series 64 McDonnell & Miller	5-5
Low Water Cutoff Series 93/193 McDonnell & Miller	5-6

5.1.Deaerator Troubleshooting - General

Symptom	Possible cause
High O ₂	<ul style="list-style-type: none"> • Trays not installed properly or not level • Improper venting • Steam pressure reducing valve sized improperly
Excessive pressure fluctuation	<ul style="list-style-type: none"> • Steam pressure reducing valve sized improperly • Excessive inlet temperature variation • Deaerator flooding • Inlet steam pressure too high or too low
Low outlet temperature	<ul style="list-style-type: none"> • Incorrect thermometer reading • Deaerator flooding • Insufficient steam flow • Spray valves malfunctioning • Improper venting • Steam pressure reducing valve piped improperly
Water Hammer	<ul style="list-style-type: none"> • Inlet flows mixing just prior to deaerator inlet • High inlet velocities • Improper piping designs
High CO ₂	<ul style="list-style-type: none"> • High CO₂ at inlet • High pH • Improper venting
Tray upsets	<ul style="list-style-type: none"> • Tray hold down not secure • Flashing
Water escaping from vent	<ul style="list-style-type: none"> • Improper vent piping • Water carryover • Cracked vent welds

5.2.Pumps

Problem	Possible cause	Remedy
The pump does not run	<ol style="list-style-type: none"> 1. No power at motor. 2. Fuses are blown or circuit breakers are tripped. 3. Motor starter overloads are burned or have tripped out. 4. Starter does not energize. 5. Defective controls. 6. Motor is defective. 7. Defective capacitor. (Single-phase motors) 8. Pump is bound. 	<p>Check for voltage at motor terminal box. If no voltage at motor, check feeder panel for tripped circuits and reset circuit.</p> <p>Turn off power and remove fuses. Check for continuity with ohmmeter. Replace blown fuses or reset circuit breaker. If new fuses blow or circuit breaker trips, the electrical installation, motor and wires must be checked.</p> <p>Check for voltage on line and load side of starter. Replace burned heaters or reset. Inspect starter for other damage. If heater trips again, check the supply voltage and starter holding coil.</p> <p>Energize control circuit and check for voltage at the holding coil. If no voltage, check control circuit fuses. If voltage, check holding coil for shorts. Replace bad coil.</p> <p>Check all safety and pressure switches for operation. Inspect contacts in control devices. Replace worn or defective parts or controls.</p> <p>Turn off power and disconnect wiring. Measure the lead to lead resistances with ohmmeter (RX-1). Measure lead to ground values with ohmmeter (RX-100K). Record measured values. If an open or grounded winding is found, remove motor and repair or replace.</p> <p>Turn off power and discharge capacitor. Check with ohmmeter (RX-100K). When the meter is connected to the capacitor, the needle should jump towards 0 ohms and slowly drift back to infinity. Replace if defective.</p> <p>Turn off power and manually rotate pump shaft. If shaft does not rotate easily, check coupling setting and adjust as necessary. If shaft rotation is still tight, remove pump and inspect. Disassemble and repair.</p>
The pump runs but at reduced capacity or does not deliver water	<ol style="list-style-type: none"> 1. Wrong rotation 2. Pump is not primed or is airbound. 3. Strainers, check or foot valves are clogged. 4. Suction lift too large. 5. Suction and/or discharge piping leaks. 6. Pump worn. 7. Pump impeller or guide vane is clogged. 	<p>Check wiring for proper connections. Correct wiring.</p> <p>Turn pump off, close isolation valve(s), remove priming plug. Check fluid level. Refill the pump, replace plug and start the pump. Long suction lines must be filled before starting the pump.</p> <p>Remove strainer, screen or valve and inspect. Clean and replace. Reprime pump.</p> <p>Install compound pressure gauge at the suction side of the pump. Start pump and compare reading to performance data. Reduce suction lift by lowering pump, increase suction line size or removing high friction loss devices.</p> <p>Pump runs backwards when turned off. Air in suction pipe. Suction pipe, valves and fittings must be airtight. Repair any leaks and retighten all loose fittings.</p> <p>Install pressure gauge, start pump, gradually close the discharge valve and read pressure at shutoff. Convert measured pressure (in PSI) to head (in feet): (Measured PSI x 2.31 ft./PSI = _____ ft.). Refer to the specific pump curve for shutoff head for that pump model. If head is close to curve, pump is probably OK. If not, remove pump and inspect.</p> <p>Disassemble and inspect pump passageways. Remove any foreign materials found.</p>
The pump runs but at reduced capacity or does not deliver water	<ol style="list-style-type: none"> 8. Incorrect drain plug installed. 9. Improper coupling setting. 	<p>If the proper drain plug is replaced with a standard plug, water will recirculate internally. Replace with proper plug.</p> <p>Check/reset the coupling.</p>

<p>Pump cycles too much</p>	<ol style="list-style-type: none"> 1. Pressure switch is not properly adjusted or is defective. 2. Level control is not properly set or is defective. 3. Insufficient air charging or leaking tank or piping. 4. Tank is too small. 5. Pump is oversized. 	<p>Check pressure setting on switch and operation. Check voltage across closed contacts. Readjust switch or replace if defective.</p> <p>Check setting and operation. Readjust setting (refer to level control manufacturer's data). Replace if defective.</p> <p>Pump air into tank or diaphragm chamber. Check diaphragm for leak. Check tank and piping for leaks with soap and water solution. Check air to water volume. Repair as necessary.</p> <p>Check tank size and air volume in tank. Tank volume should be approximately 10 gallons for each gpm of pump capacity. The normal air volume is 2/3 of the total tank volume at the pump cut-in pressure. Replace tank with one of correct size.</p> <p>Install pressure gauges on or near pump suction and discharge ports. Start and run pump under normal conditions, record gauge readings. Convert PSI to feet (Measured PSI x 2.31 ft./PSI = _____ ft.) Refer to the specific pump curve for that model, ensure that total head is sufficient to limit pump delivery within its design flow range. Throttle pump discharge flow if necessary.</p>
<p>Fuses blow or circuit breakers or overload relays trip</p>	<ol style="list-style-type: none"> 1. Low voltage. 2. Motor overloads are set too low. 3. Three-phase current is imbalanced. 4. Motor is shorted or grounded. 5. Wiring or connections are faulty. 6. Pump is bound. 7. Defective capacitor (single-phase motors). 8. Motor overloads at higher ambient temperature than motor. 	<p>Check voltage at starter panel and motor. If voltage varies more than $\pm 10\%$, contact power company. Check wire sizing.</p> <p>Cycle pump and measure amperage. Increase heater size or adjust trip setting to a maximum of motor nameplate (full load) current.</p> <p>Check current draw on each lead to the motor. Must be within $\pm 5\%$. If not, check motor and wiring. Rotating all leads may eliminate this problem.</p> <p>Turn off power and disconnect wiring. Measure the lead-to-lead resistance with an ohmmeter (RX-1). Measure lead-to-ground values with an ohmmeter (RX-100K) or a megaohm meter. Record values. If an open or grounded winding is found, remove the motor, repair and/or replace.</p> <p>Check proper wiring and loose terminals. Tighten loose terminals. Replace damaged wire.</p> <p>Turn off power and manually rotate pump shaft. If shaft does not rotate easily, check coupling setting and adjust as necessary. If shaft rotation is still tight, remove pump and inspect. Disassemble and repair.</p> <p>Turn off power and discharge capacitor. Check with ohmmeter (RX-100K). When the meter is connected to the capacitor, the needle should jump towards 0 ohms and slowly drift back to infinity. Replace if defective.</p> <p>Use a thermometer to check the ambient temperature near the overloads and motor. Record these values. If ambient temperature at motor is lower than at overloads, especially where temperature at overloads is above $+104^{\circ}\text{F}$ ($+40^{\circ}\text{C}$), ambient-compensated heaters should replace standard heaters.</p>

5.3.High Water Alarm Series 63 McDonnell & Miller

Problem: Burner does not shut off on low water.		
Cause	Test	Solution
Float chamber is loaded with mud or sediment.	With water level below the control check if terminals C and N.C. are open. If not, remove switch and manually test if terminals C and N.C. can be opened.	Open float chamber and clean. At this time, check for a build-up of scale or sediment between corrugations of the bellows.
Contacts are fused together.	Remove switch and operate manually to verify proper switch operation.	Replace switch. Check electrical load and make sure it is within the ratings of the switch.

5.4.Low Water Cutoff Series 64 McDonnell & Miller

Problem: Burner does not shut off on low water.		
Cause	Test	Solution
Float chamber is loaded with mud or sediment.	With water level below the control check if terminals 1 and 2 are open. If not, remove switch and manually test if terminals 1 and 2 can be opened.	Open float chamber and clean. At this time, check for a build-up of scale or sediment between corrugations of the bellows.
Contacts are fused together.	Remove switch and operate manually to verify proper switch operation.	Replace switch. Check electrical load and make sure it is within the ratings of the switch.

Problem: Electric water feeder does not shut off.		
Cause	Test	Solution
Build-up of scale or sediment between corrugations of the bellows.	With water level above the control, check if terminals 3 and 4 are open. If not, remove switch and manually test to verify terminals 3 and 4 can be opened.	Open float chamber and replace or clean the bellows.
Contacts are fused together.	Remove switch and operate manually to verify proper switch operation.	Replace switch. Check electrical load and make sure it is within the ratings of the switch.

5.5.Low Water Cutoff Series 93/193 McDonnell & Miller

Common symptoms of a problem with the control include pump and/or burner switches not switching at proper levels. Refer to the following list of items to check if the control is not operating properly.

1. Float Ball is Crushed

Crushed floats are typically caused by improper blowdown. Drain piping from blowdown valve to drain should be checked for proper pitch and the blowdown procedure followed when blowing down the control. Purchase and install a new float ball after investigating and correcting the problem.

2. Float Ball is Filled with Water

The seam weld on the float can sometimes deteriorate. This can be caused by the type of chemical treatment used in the deaerator. While this is a rare occurrence, the chemical treatment supplier should be consulted to determine if a reaction could occur. Purchase and install a new float ball after investigating and correcting the problem.

3. Float Arm Springs are Bent

The pivot springs located on either side of the float rod should be flat and straight. If they become bent, the usual cause is mishandling of the unit during installation or improper blowdown. The control should never be picked up by the float ball or allowed to hang from the bowl by the float. Drain piping from blowdown valve to drain should be checked for proper pitch and the blowdown procedure followed when blowing down control. Purchase and install new control or head mechanism after investigating and correcting the problem.

4. Switch Contact Springs Broken

The contact springs can break if the electrical rating is exceeded. Purchase and install new switch assembly or head mechanism after investigating and correcting the problem.

5. Switch Contact Springs Misaligned

Misalignment of the contact arms is usually associated with damage to the control during shipment or installation. Purchase and install new switch assembly or head mechanism after investigating and correcting the problem.

6. Internal (Wetted) Parts Dirty

The internal parts can operate improperly if dirt, scale or rust is allowed to build. This condition can be a result of not blowing down the control as recommended and/or improper boiler water chemical treatment. Purchase and install new control or head mechanism after investigating and correcting the problem.



Section 6 Parts

Standard Traymaster Parts	2
Manway Cover Assemblies	2
Pressure Reducing Valves (Fisher 92 Series)	2
Pressure Reducing Valves (Spence ED Series)	3
Pressure Reducing Valves (Spence E2D Series)	3
Valve Sets for Gauge Glass	4
Overflow Drainer (Steam Trap)	4
Siemens Actuator Series 599	5
Siemens Actuator Series 599	6
Wiring Diagram for use with Siemens Actuator Series 599	7
Make-Up Controls (Lever Operated Make-Up Valves) (Fisher 171L)	8
Make-Up Controls (Lever Operated Make-Up Valves) (Fisher 670EK)	8
Make-Up Controls (Lever Operated Make-Up Valves) (Fisher 608EK)	8
Make-Up Controls (Diaphragm Operated Make-Up Valves) (Fisher 657ES) ..	8
Spray Valve	9
Tray Assembly	9
Manway Assembly, 16" Davited, 50# D.P.	10
Manway Assembly, 18" Davited, 50# D.P.	11
Manway Assembly, 20" Davited, 50# D.P.	12
Manway Assembly, 24" Davited, 50# D.P.	13
Manway Assembly, 28" Davited, 50# D.P.	14
Manway Assembly, 32" Davited, 50# D.P.	15
Manway Assembly, 36" Davited, 50# D.P.	16

Table 6-1 Standard Traymaster Parts

PART NO.	DESCRIPTION	USAGE
851-284	Glass, Gauge, 5/8" x 61-7/8"	108" Dia
853-115	Gasket, 5/8" Gauge Glass	2 per Glass
853-936	Gasket, Manhole, 11" x 15"	
853-939	Gasket, Manhole, 12" x 16"	
825-281	Set, Water Gauge	
950-50	Gauge, Pressure, 4-1/2", 0-60 lbs, Bottom Connector	
850-583	Gauge, Pressure, 4-1/2", 0-60 lbs, Back Connector	
937-669	Thermometer, 0-250°F, 4" Stem	
937-660	Thermometer, 50-300°F, 4-1/2" Dial, 5 ft. Capillary	
937-662	Thermometer, 50-300°F, 4-1/2" Dial, 20 ft. Capillary	
934-322	Valve, Auto -Vent, 1/2"	
817-161	Control, Water Level, McDM-51-B	
817-187	Control, Water Level, McDM-51-B-S	

Table 6-2 Manway Cover Assemblies

Gasket PART NO.	COVER		YOKE		BOLT		NUT		WASHER	
	PART NO.	REQ.	PART NO.	REQ.	PART NO.	REQ.	PART NO.	REQ.	PART NO.	REQ.
11" x 15" Manhole Cover and Yoke Assembly										
853-936	821-191	1	953-460	2	868-1023	2	869-65	2	952-288	2
12"x 16" Manhole Cover and Yoke Assembly (Standard)										
853-939	821-207	1	953-50	2	868-778	2	869-320	2	952-132	2

Table 6-3 Pressure Reducing Valves (Fisher 92 Series)

DESCRIPTION	FISHER #92 PART NO.	CURRENT FISHER REPLACEMENT PART NO.	APPROXIMATE WEIGHT
1/2" Fisher PRV	940-1448	918-505	12 lbs
3/4" Fisher PRV	940-1329	918-507	23 lbs
1" Fisher PRV	940-1449	918-512	23 lbs
1-1/4" Fisher PRV	940-1355	Call Factory for Replacement	-
1-1/2" Fisher PRV	940-1427	918-513	42 lbs
2" Fisher PRV	940-1447	918-514	55 lbs
2-1/2" Fisher PRV	940-1611	918-516	67 lbs
3" Fisher PRV	940-1612	918-517	115 lbs
4" Fisher PRV	940-1618	918-518	165 lbs
6" Fisher PRV	940-1617	Call Factory for Replacement	-

NOTE: The above chart is only for standard Cleaver-Brooks specified deaerator pressure reducing valves.

Table 6-4 Pressure Reducing Valves (Spence ED Series)

DESCRIPTION	PART NO.	APPROXIMATE WEIGHT
1/2" Spence PRV	940-4904	24 lbs
3/4" Spence PRV	940-4339	28 lbs
1" Spence PRV	940-4905	33 lbs
1-1/4" Spence PRV	940-4722	43 lbs
1-1/2" Spence PRV	940-4077	53 lbs
2" Spence PRV	940-3298	77 lbs
2-1/2" Spence PRV	940-4906	92 lbs
3" Spence PRV	940-4907	120 lbs
4" Spence PRV	940-3976	210 lbs
5" Spence PRV	940-4450	290 lbs

NOTE: The above chart is only for standard Cleaver-Brooks specified deaerator pressure reducing valves.

Table 6-5 Pressure Reducing Valves (Spence E2D Series)

DESCRIPTION	PART NO.	APPROXIMATE WEIGHT
3/4" Spence PRV	940-4919	28 lbs
1" Spence PRV	940-3321	29 lbs
1-1/4" Spence PRV	940-4358	40 lbs
1-1/2" Spence PRV	940-2740	46 lbs
2" Spence PRV	940-2885	67 lbs
2-1/2" Spence PRV	940-2859	80 lbs
3" Spence PRV	940-3390	108 lbs
4" Spence PRV	940-3357	145 lbs
5" Spence PRV	940-4069	195 lbs
6" Spence PRV	940-3303	260 lbs

NOTE:

The above chart is only for standard Cleaver-Brooks specified deaerator pressure reducing valves.

Table 6-6 Valve Sets for Gauge Glass

DESCRIPTION	PART NO.
Valve Set with Ball Valve (Obsolete)	825-216
Valve Set (Standard)*	825-281
Ball Valve (Standard)*	941-55
Valve Set with Ball Valve (Special)	825-317

*Use one of each when replacing Part Number 825-216.

Table 6-7 Overflow Drainer (Steam Trap)

DESCRIPTION	PART NO.	APPROXIMATE WEIGHT
OFD, 1" NPT Warren #313	817-2040	60 lbs
OFD, 2" NPT Warren #313	817-2041	75 lbs
OFD, 3" FLG Warren #313	817-1910	125 lbs
OFD, 4" FLG Warren #313	817-1554	150 lbs
OFD, 6" FLG Warren #313	817-1663	200 lbs
OFD, 1" NPT Fisher #38 (Obsolete)	817-673	65 lbs
OFD, 1-1/2" NPT Fisher #38 (Obsolete)	817-769	110 lbs
OFD, 2" NPT Fisher #38 (Obsolete)	817-666	120 lbs
OFD, 3" NPT Fisher #38 (Obsolete)	817-671*	No Longer Mfg.

*Replace with 3" Warren #313 (Part No. 817-1910), but note that piping will have to be modified to fit.

DEAERATOR CHART-MAXIMUM WATER CAPACITY-U.S. GALLONS PER MINUTE

PART NUMBER	VALVE SIZE IN INCHES	CV	* FEEDWATER VALVE INLET PRESSURE - PSI						
			* 25	30	40	50	60	70	100
941-02570	1/2	4	12.6	15.5	20	23.7	26.8	29.7	36.9
941-02571	3/4	6.3	19.9	24.4	31.5	37	42	46.7	58
941-02572	1	10	31.6	38.7	50	59	67	74	92
941-02573	1-1/4	16	50.6	62	80	94.7	107.3	118.7	147.5
941-02574	1-1/2	25	79	97	125	148	167.7	185.4	230.4
941-02575	2	40	126.4	155	200	237	268	296.6	368.7

* NOTE: TABLE IS BASED ON DEAERATOR OPERATING PRESSURE OF 5 PSI WITH A WATER SPRAY HEAD PRESSURE DROP OF 7-10 PSI. THE SIEMENS FEEDWATER VALVE SELECTION IS BASED ON A VALVE PRESSURE DROP OF 10 PSI @ AT 25 PSI FEEDWATER INLET PRESSURE.

DEAERATORS WITH SIEMENS VALVES SIZES 1/2" THRU 1-1/4" ARE USED WITH ACTUATOR PART NUMBER 945-00222.
DEAERATORS WITH SIEMENS VALVES SIZES 1-1/2" AND 2" ARE USED WITH ACTUATOR PART NUMBER 945-00240.

WHEN MAKE-UP WATER IS FED DIRECTLY TO THE DEAERATOR, THE SIZE AND CAPACITY ARE DEPENDANT ON INLET WATER PRESSURE. TO SELECT VALVE SIZE, FIRST DETERMINE MAKE-UP REQUIREMENT. THEN SELECT A VALVE WITH ADEQUATE CAPACITY AT THE MINIMUM SUPPLY PRESSURE.

EXAMPLE: TOTAL LOAD = 45,000 LB/HR (90 GPM)
MAKE-UP = 50% OR 22,500 LB/HR (45 GPM)
SUPPLY PRESSURE IS 40 PSIG TO 60 PSIG
SELECT A 1" VALVE WHICH WILL PASS 45 GPM MINIMUM @ 40 PSIG.

A THREE VALVE BYPASS AROUND THE MAKE-UP VALVE ALONG WITH AN INLET STRAINER IS RECOMMENDED.


WHEN VALVE IS USED ON DEAERATOR IN A TWO-TANK SYSTEM OR DUO-TANK SYSTEM, ENTIRE LOAD IS PASSED THROUGH VALVE. SELECT VALVE SIZE BASED ON TOTAL CAPACITY AT 25 PSIG SUPPLY PRESSURE.

EXAMPLE: TOTAL LOAD = 45,000 LB/HR (90 GPM)
SELECT A 2" VALVE THAT WILL PASS 90 GPM MINIMUM @ 25 PSI INLET PRESSURE.

GENERAL NOTES:

- 1) ALL ACTUATORS REQUIRE 24 VDC TRANSFORMER P/N 832-00235, USED WITH LEVEL MASTER AND McDONNELL MILLER LWCO.
- 2) ACTUATOR AUXILIARY SWITCH SPDT INDICATES ZERO STROKE POSITION P/N 836-1339 MAY BE REQUIRED FOR SPECIFIC CUSTOMER CONNECTIONS (SEE WIRING DRAWING SHEET 4).
- 3) McDONALD MILLER REQUIRES THE USE OF A 10-12 VDC POWER SUPPLY P/N 832-02179 IN ADDITION TO USING P/N 832-00235.

Table 6-8 Siemens Actuator Series 599

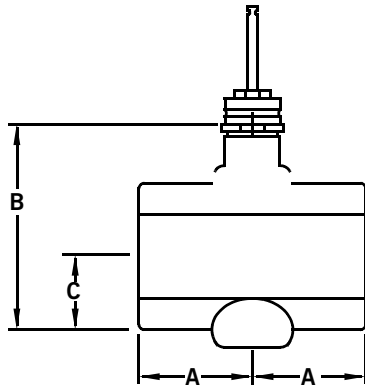

Female NPT by
Female NPT F X F


2-WAY VALVE DIMENSIONS

VALVE ACTION	VALVE SIZE INCHES	A	B	C	VALVE ASSEMBLY WEIGHT
		FxF			
NORMALLY CLOSED	1/2	1-7/16	3-13/16	2-3/16	3
	3/4	1-11/16	3-13/16	2-3/16	4
	1	2	3-13/16	2-3/16	5
	1-1/4	2-1/2	3-13/16	2-3/16	7
	1-1/2	2-9/16	3-7/8	2-1/4	8
	2	3-1/8	4-1/2	2-9/16	16

SIEMENS FEEDWATER VALVE-MAXIMUM WATER CAPACITY-U.S. GALLONS PER MINUTE

PART NUMBER	VALVE SIZE IN INCHES	PRESSURE DIFFERENTIAL - PSI						
		CV	5	10	20	25	30	40
941-2567	1/2	1.0	2.2	3.2	4.5	5.0	5.5	6.3
941-2568	1/2	1.6	3.6	5.1	7.2	8.0	8.8	10.1
941-2569	1/2	2.5	5.6	7.9	11.2	12.5	13.7	15.8
941-2570	1/2	4	8.9	12.6	17.9	20.0	21.9	25
941-2571	3/4	6.3	14.1	20	28	32	35	40
941-2572	1	10	22	32	45	50	55	63
941-2573	1-1/4	16	36	51	72	80	88	101
941-2574	1-1/2	25	56	79	112	125	137	158
941-2575	2	40	89	126	179	200	219	253

Table 6-9 Siemens Actuator Series 599

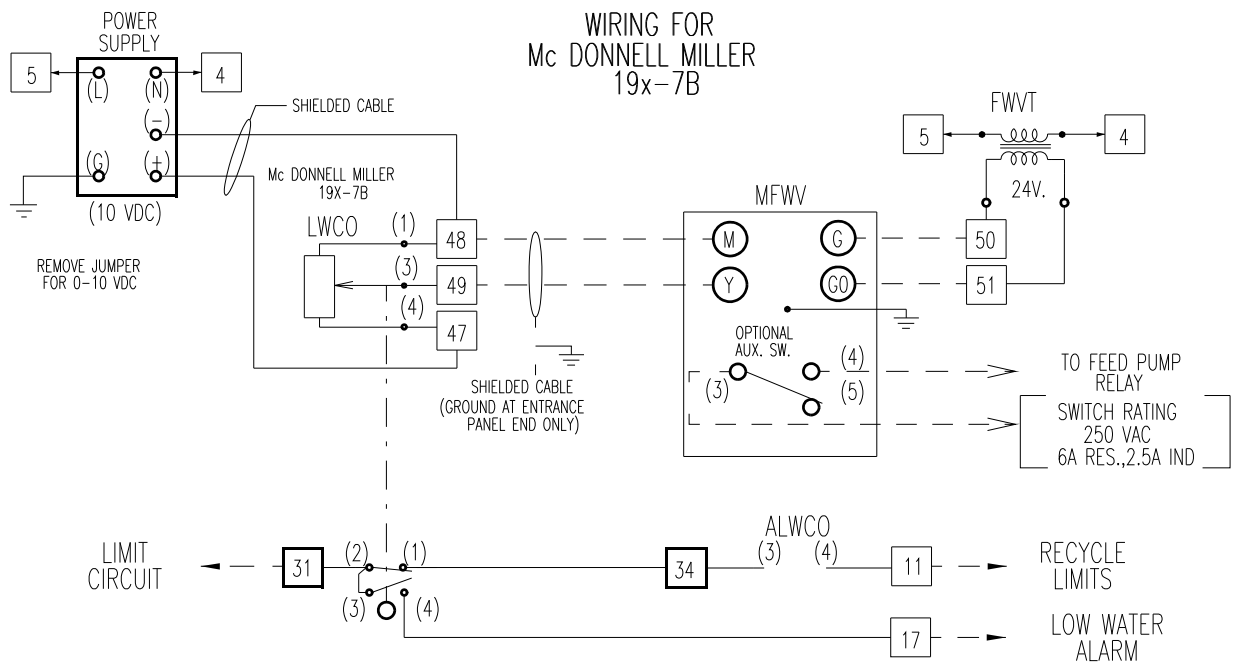

NOTE: MFW DIP SWITCH 3 - OFF

Table 6-10 Wiring Diagram for use with Siemens Actuator Series 599

Table 6-11 Make-Up Controls (Lever Operated Make-Up Valves) (Fisher 171L)

DESCRIPTION	PART NO.	APPROXIMATE WEIGHT	DESCRIPTION*	PART NO.
Make-Up Valve, Lever Operated 1/2"	940-3539	8 lbs	Repair Kit for 171L 3/8" thru 3/4"	797-04052
Make-Up Valve, Lever Operated 3/4"	940-3540	8 lbs	Repair Kit for 171L 3/8" thru 3/4"	797-04052
Make-Up Valve, Lever Operated 1"	940-3541	8 lbs	Repair Kit for 171L 1"	797-04053
Make-Up Valve, Lever Operated 1-1/4"	940-3542	19 lbs	Repair Kit for 171L 1-1/4" and 1-1/2"	797-04054
Make-Up Valve, Lever Operated 1-1/2"	940-3543	25 lbs	Repair Kit for 171L 1-1/4" and 1-1/2"	797-04054
Make-Up Valve, Lever Operated 2"	940-3544	30 lbs	Repair Kit for 171L 2"	797-04055

* Kits include O-ring, seat ring, pilot valve assembly, packing, piston rinr, and expander.

Table 6-12 Make-Up Controls (Lever Operated Make-Up Valves) (Fisher 670EK)

DESCRIPTION	PART NO.
Make-Up Valve, Lever Operated 1" NPT	940-4894
Make-Up Valve, Lever Operated 1-1/2" NPT	940-4474
Make-Up Valve, Lever Operated 2-1/2" FLG	940-5193
Make-Up Valve, Lever Operated 3"	940-4278
Make-Up Valve, Lever Operated 4"	940-4320

Table 6-13 Make-Up Controls (Lever Operated Make-Up Valves) (Fisher 608EK)

DESCRIPTION	PART NO.
Make-Up Valve, Lever Operated 2-1/2" FLG	940-4697
Make-Up Valve, Lever Operated 3" FLG	940-4781
Make-Up Valve, Lever Operated 4" FLG	940-4580

Table 6-14 Make-Up Controls (Diaphragm Operated Make-Up Valves) (Fisher 657ES)

DESCRIPTION	PART NO.
Make-Up Valve, Diaphragm Operated 1/2" NPT	940-4520
Make-Up Valve, Diaphragm Operated 3/4" NPT	940-4632
Make-Up Valve, Diaphragm Operated 1" PT	940-4081
Make-Up Valve, Diaphragm Operated 1-1/2" NPT	940-3849
Make-Up Valve, Diaphragm Operated 2" NPT	940-4660
Make-Up Valve, Diaphragm Operated 2-1/2" FLG	940-4555
Make-Up Valve, Diaphragm Operated 3" FLG	940-4684

NOTE: Shown is a typical 657 diaphragm actuator mounted on an ES valve.

ITEM	QTY	PART NO.	DESCRIPTION
1	1	858-00341-000	COUPLING, FULL, 2 1/2" NPT 150#, 316L SS
2	1	976-00058-000	BULK PLATE, 1/2" X 3-1/4" DIA., 316L SS
3	1	976-00109-000	BULK PLATE, 1/4" X 1-5/8" DIA., 316L SS
4	1	976-00109-000	BULK PLATE, 1/4" X 3/4" X 2-3/4" LG., 316L SS
5	1	841-01872-000	BULK THREAD STOCK, 3/8-24 UNF X 3-5/8" LG., 316 SS
6	1	082-00754-000	SPRING, COMPRESSION, 1-1/2" DIA. X 3/16" X 1-7/8" LG., 316 SS
7	1	869-00367-000	NUT, HEX, 3/8-24 UNF, 316 SS

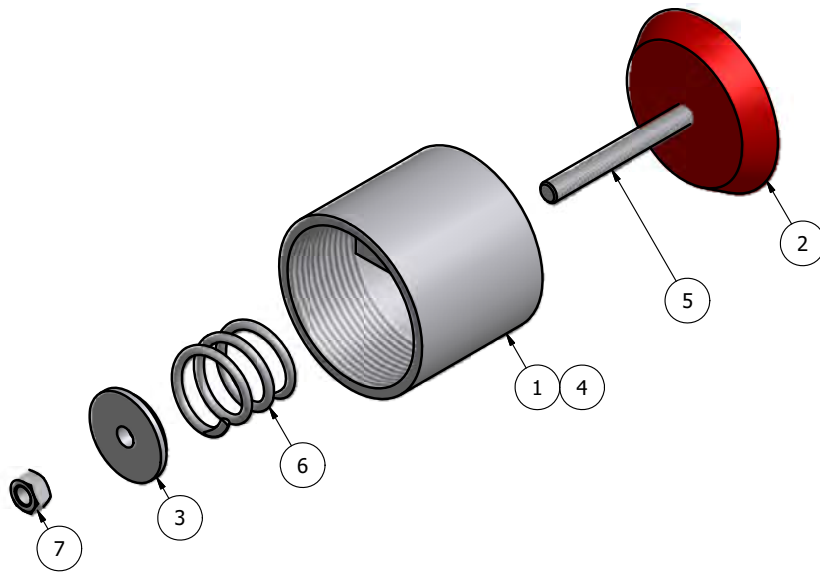


Table 6-15 Spray Valve

Tray Size	Part No.
36"	275-00300
24"	275-00298
18"	275-00297

Table 6-16 Tray Assembly

ITEM	QTY	PART NO.	DESCRIPTION
1	1	029-02010	FLANGE, RING, 16" MANWAY, 50# F.F. (029B02003)
2	1	029-01801	FLANGE, BLIND, 16" MANWAY, 50# F.F. (029B01761)
3	1	975-00845	BULK PLATE, 1/2" x 3 7/16" x 10" LG. SA36
4	1	900-00758	BULK PIPE, 2 1/2" SCH.40 (.203) x 3/4" LG. SA53-B ERW
5	1	971-00219	BULK BAR, ROUND, .375" DIA. x 6 13/16" LG. A307 GR.B
6	1	900-00202	BULK PIPE, 2" SCH.80 (.218) x 33 1/8" LG. SA53-B ERW
7	1	900-00758	BULK PIPE, 2 1/2" SCH.40 (.203) x 11" LG. SA53-B ERW
8	1	603-01382	BOLT & GASKET ASSY, 16" 50# F.F. MANWAY (603B01382)
9	1	841-01640	EYE BOLT, PLAIN, FORGED, 1/2"-13 UNC x 8" LG.
10	1	952-00111	WASHER, FLAT, PLATED WROUGHT STEEL, 1-3/8" OD x 9/16" ID
11	2	869-00086	NUT, HEX, 1/2"-13, ANSI B18.2.2
12	1	037A00222	HANDLE, DOOR

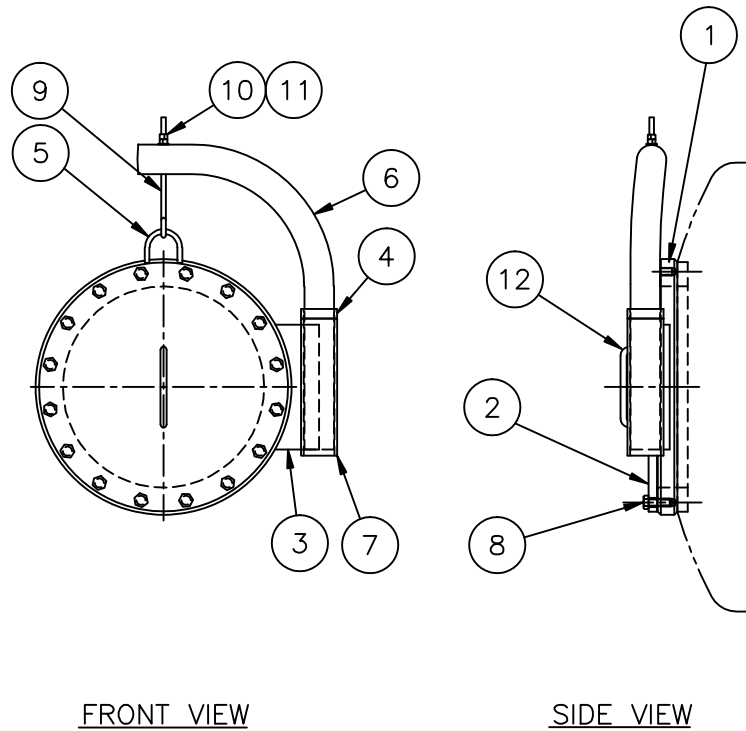


Table 6-17 Manway Assembly, 16" Davited, 50# D.P.

ITEM	QTY	PART NO.	DESCRIPTION
1	1	029-02011	FLANGE, RING, 18" MANWAY, 50# F.F. (029B02003)
2	1	029-01820	FLANGE, BLIND, 18" MANWAY, 50# F.F. (029B01761)
3	1	975-00845	BULK PLATE, 1/2" x 3 3/8" x 10" LG. SA36
4	1	900-00758	BULK PIPE, 2 1/2" SCH.40 (.203) x 3/4" LG. SA53-B ERW
5	1	971-00219	BULK BAR, ROUND, 3/8" DIA. x 6 13/16" LG. A307 GR.B
6	1	900-00202	BULK PIPE, 2" SCH.80 (.218) x 35 1/2" LG. SA53-B ERW
7	1	900-00758	BULK PIPE, 2 1/2" SCH.40 (.203) x 11" LG. SA53-B ERW
8	1	603-01383	BOLT & GASKET ASSY, 18" 50# F.F. MANWAY (603B01382)
9	1	841-01640	EYE BOLT, PLAIN, FORGED, 1/2"-13 UNC x 8" LG.
10	1	952-00111	WASHER, FLAT, PLATED WROUGHT STEEL, 1-3/8" OD x 9/16" ID
11	2	869-00086	NUT, HEX, 1/2"-13, ANSI B18.2.2
12	1	037A00222	HANDLE, DOOR

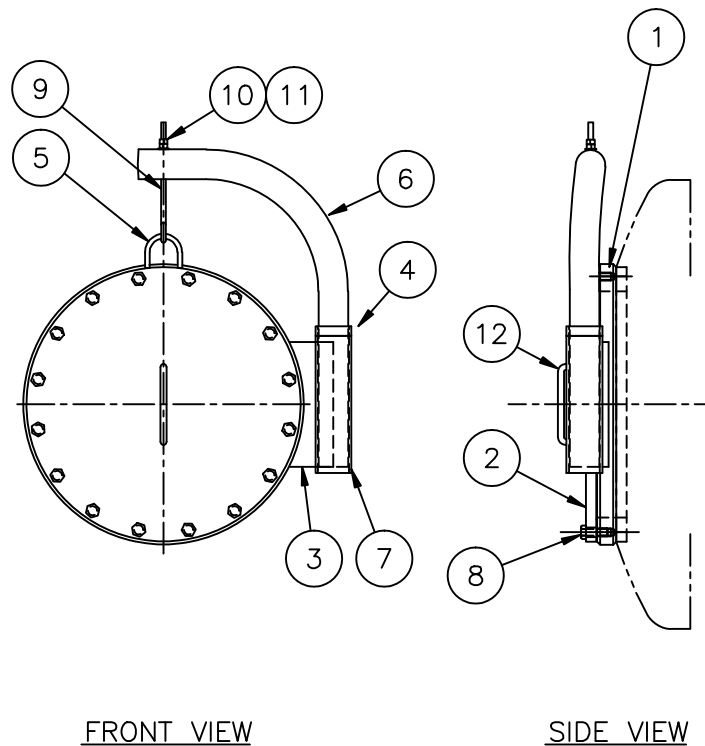


Table 6-18 Manway Assembly, 18" Davited, 50# D.P.

ASSEMBLY P/N 317-00131			
ITEM	QTY	PART NO.	DESCRIPTION
1	1	029-02012	FLANGE, RING, 20" MANWAY, 50# F.F. (029B02003)
2	1	029-01778	FLANGE, BLIND, 20" MANWAY, 50# F.F. (029B01761)
3	1	603-01384	BOLT & GASKET ASSY, 20" 50# F.F. MANWAY (603B01382)
4	1	841-01640	EYE BOLT, PLAIN, FORGED
5	1	952-00111	WASHER, FLAT, PLATED WROUGHT STEEL
6	2	869-00086	NUT, HEX.

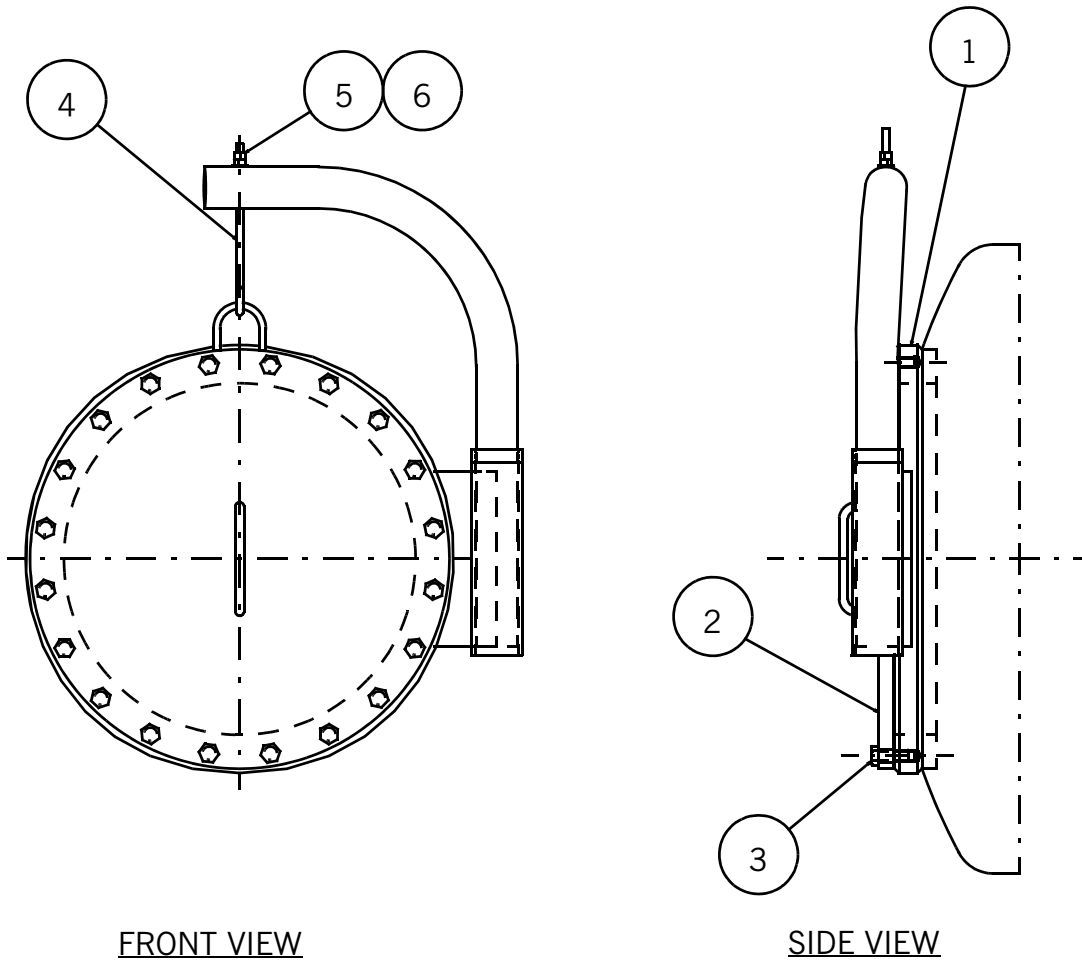


Table 6-19 Manway Assembly, 20" Davited, 50# D.P.

ASSEMBLY P/N 317-00132			
ITEM	QTY	PART NO.	DESCRIPTION
1	1	029-02013	FLANGE, RING, 24" MANWAY, 50# F.F. (029B02003)
2	1	029-01811	FLANGE, BLIND, 24" MANWAY, 50# F.F. (029B01761)
3	1	603-01385	BOLT & GASKET ASSY, 24" 50# F.F. MANWAY (603B01382)
4	1	841-01640	EYE BOLT, PLAIN, FORGED
5	1	952-00111	WASHER, FLAT, PLATED WROUGHT STEEL
6	2	869-00086	NUT, HEX, 1/2"-13

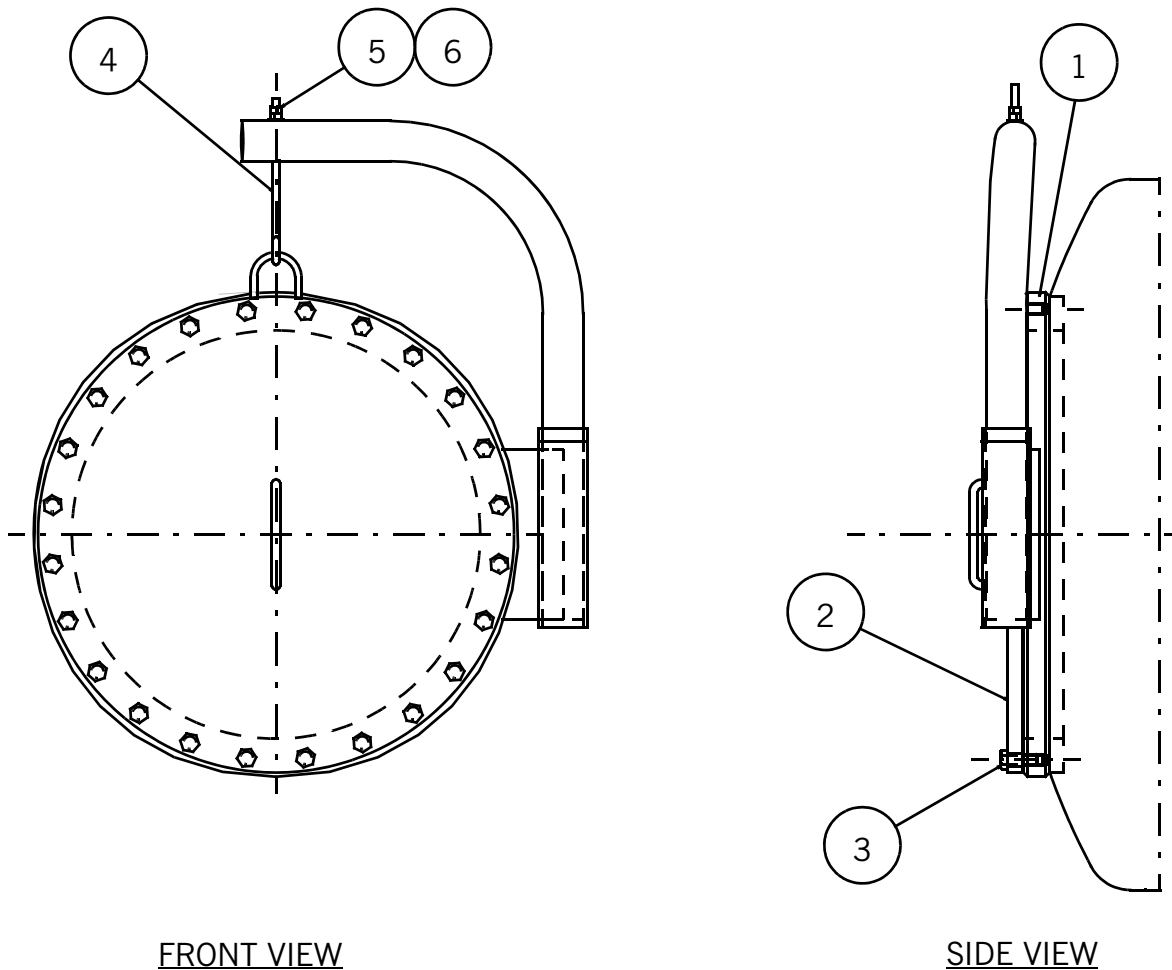


Table 6-20 Manway Assembly, 24" Davited, 50# D.P.

ASSEMBLY P/N 317-00133			
ITEM	QTY	PART NO.	DESCRIPTION
1	1	029B02003	FLANGE, RING, 28" MANWAY, 50# F.F.
2	1	029-01823	FLANGE, BLIND, 28" MANWAY, 50# F.F. (029B01761)
3	1	603-01386	BOLT & GASKET ASSY, 28" 50# F.F. MANWAY (603B01382)
4	1	841-01640	EYE BOLT, PLAIN, FORGED
5	1	952-00111	WASHER, FLAT, PLATED WROUGHT STEEL
6	2	869-00086	NUT, HEX

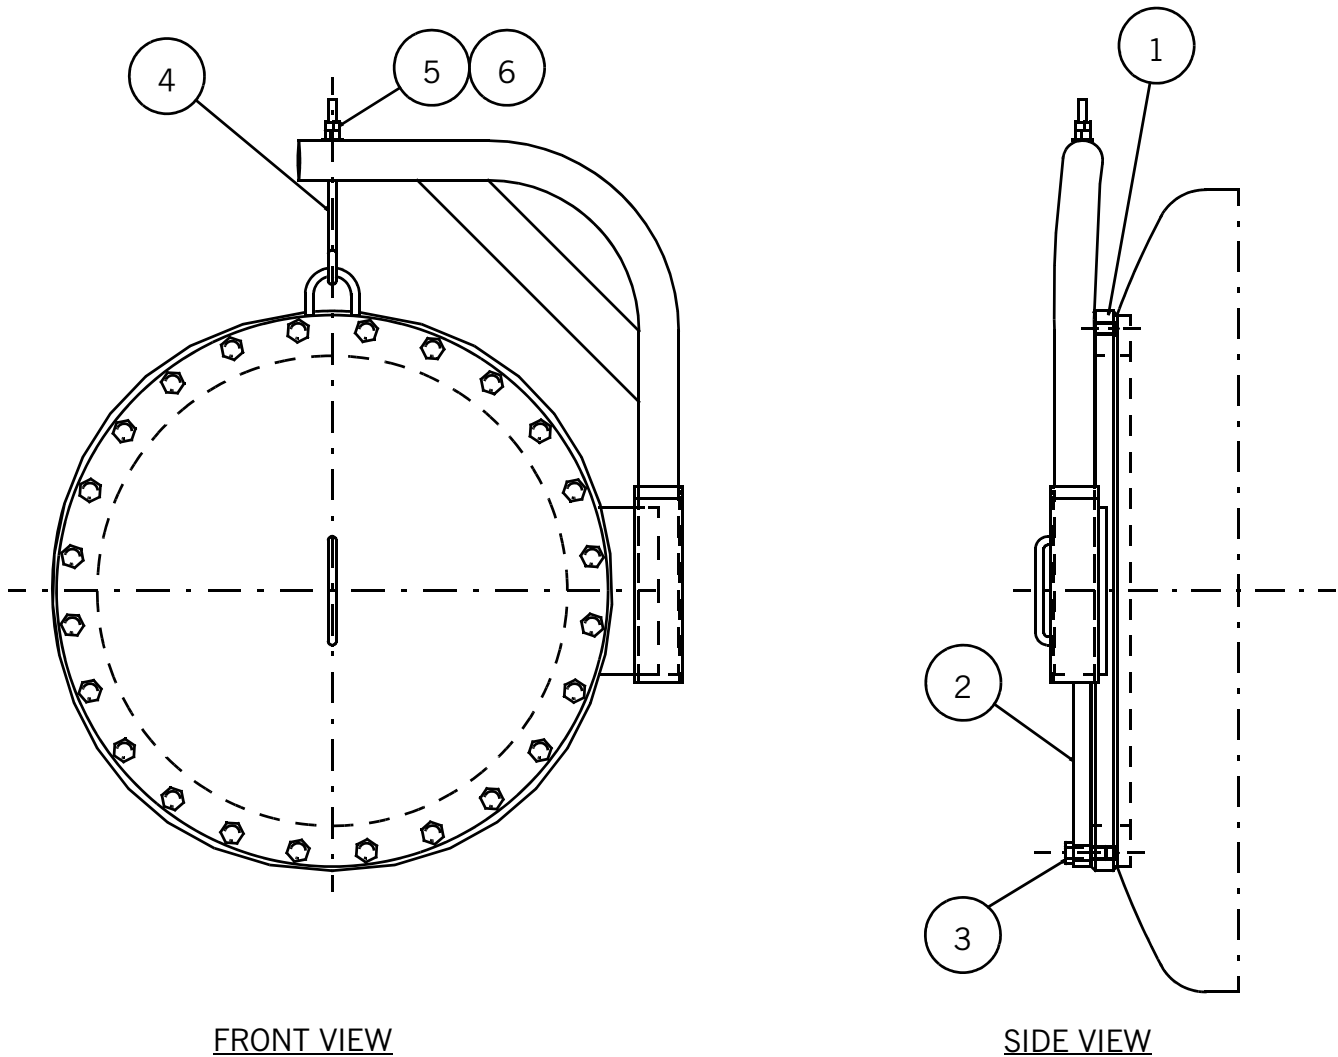


Table 6-21 Manway Assembly, 28" Davited, 50# D.P.

ASSEMBLY P/N 317-00134			
ITEM	QTY	PART NO.	DESCRIPTION
1	1	029-02014	FLANGE, RING, 32" MANWAY, 50# F.F. (029B02003)
2	1	029-01825	FLANGE, BLIND, 32" MANWAY, 50# F.F. (029B01761)
3	1	603-01387	BOLT & GASKET ASSY, 32" 50# F.F. MANWAY (603B01382)
4	1	841-01640	EYE BOLT, PLAIN, FORGED
5	1	952-00111	WASHER, FLAT, PLATED WROUGHT STEEL
6	2	869-00086	NUT, HEX

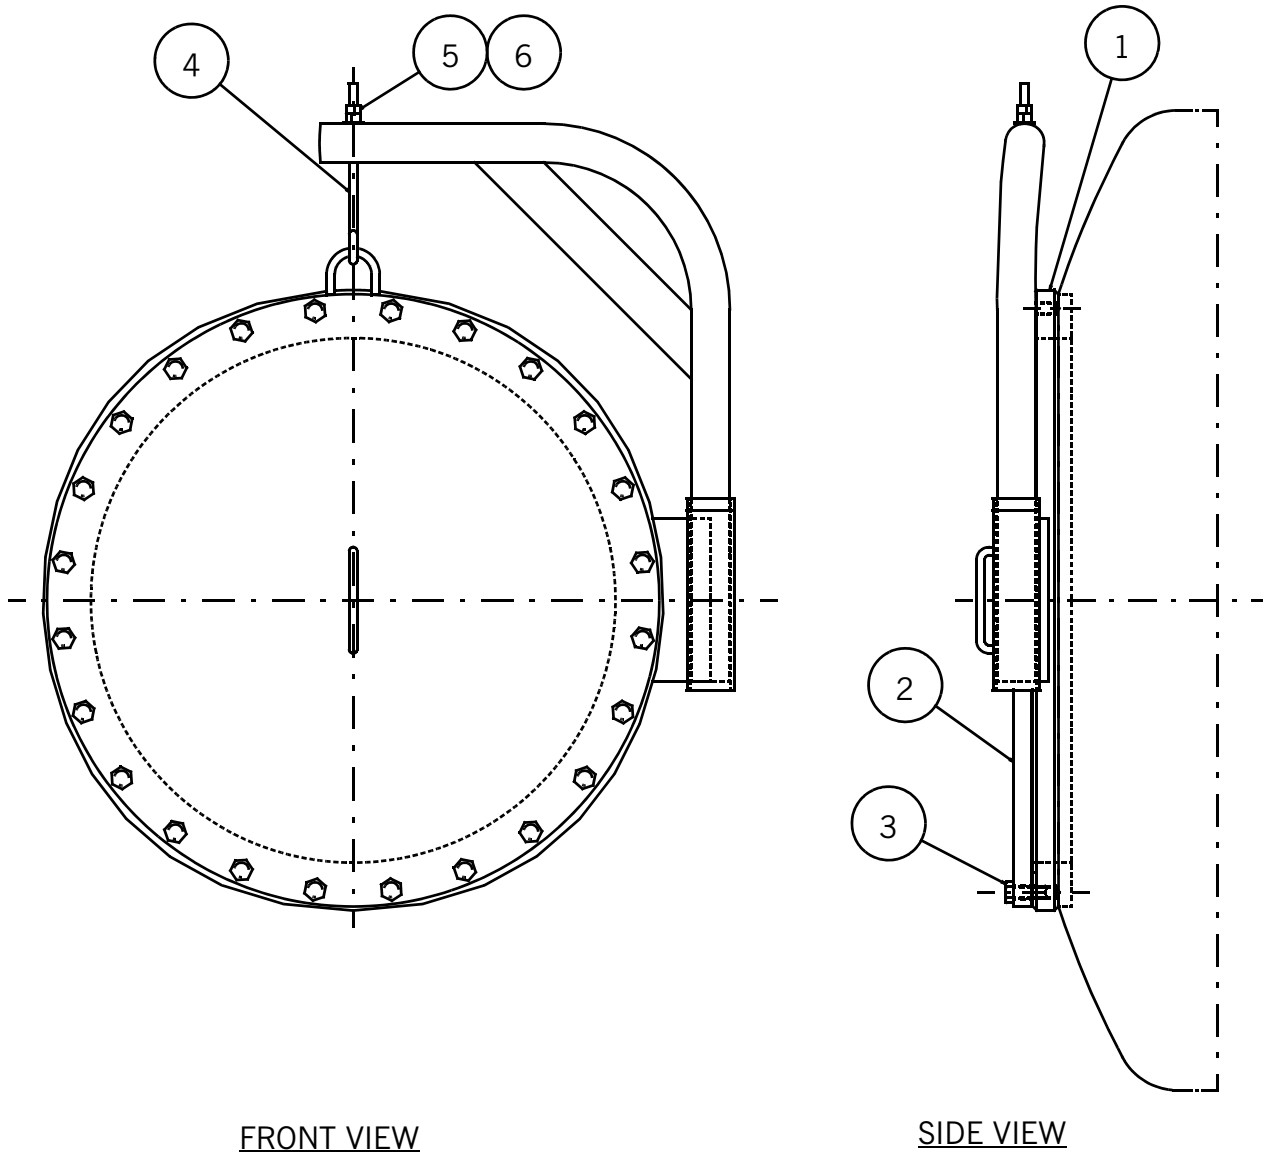


Table 6-22 Maway Assembly, 32" Davited, 50# D.P.

ASSEMBLY P/N 317-00135			
ITEM	QTY	PART NO.	DESCRIPTION
1	1	029-02015	FLANGE, RING, 36" MANWAY, 50# F.F. (029B02003)
2	1	029-01799	FLANGE, BLIND, 36" MANWAY, 50# F.F. (029B01761)
3	1	603-01388	BOLT & GASKET ASSY, 36" 50# F.F. MANWAY (603B01382)
4	1	841-01684	EYE BOLT, PLAIN, FORGED
5	1	952-00205	WASHER, FLAT, PLATED WROUGHT STEEL
6	2	869-00040	NUT, HEX

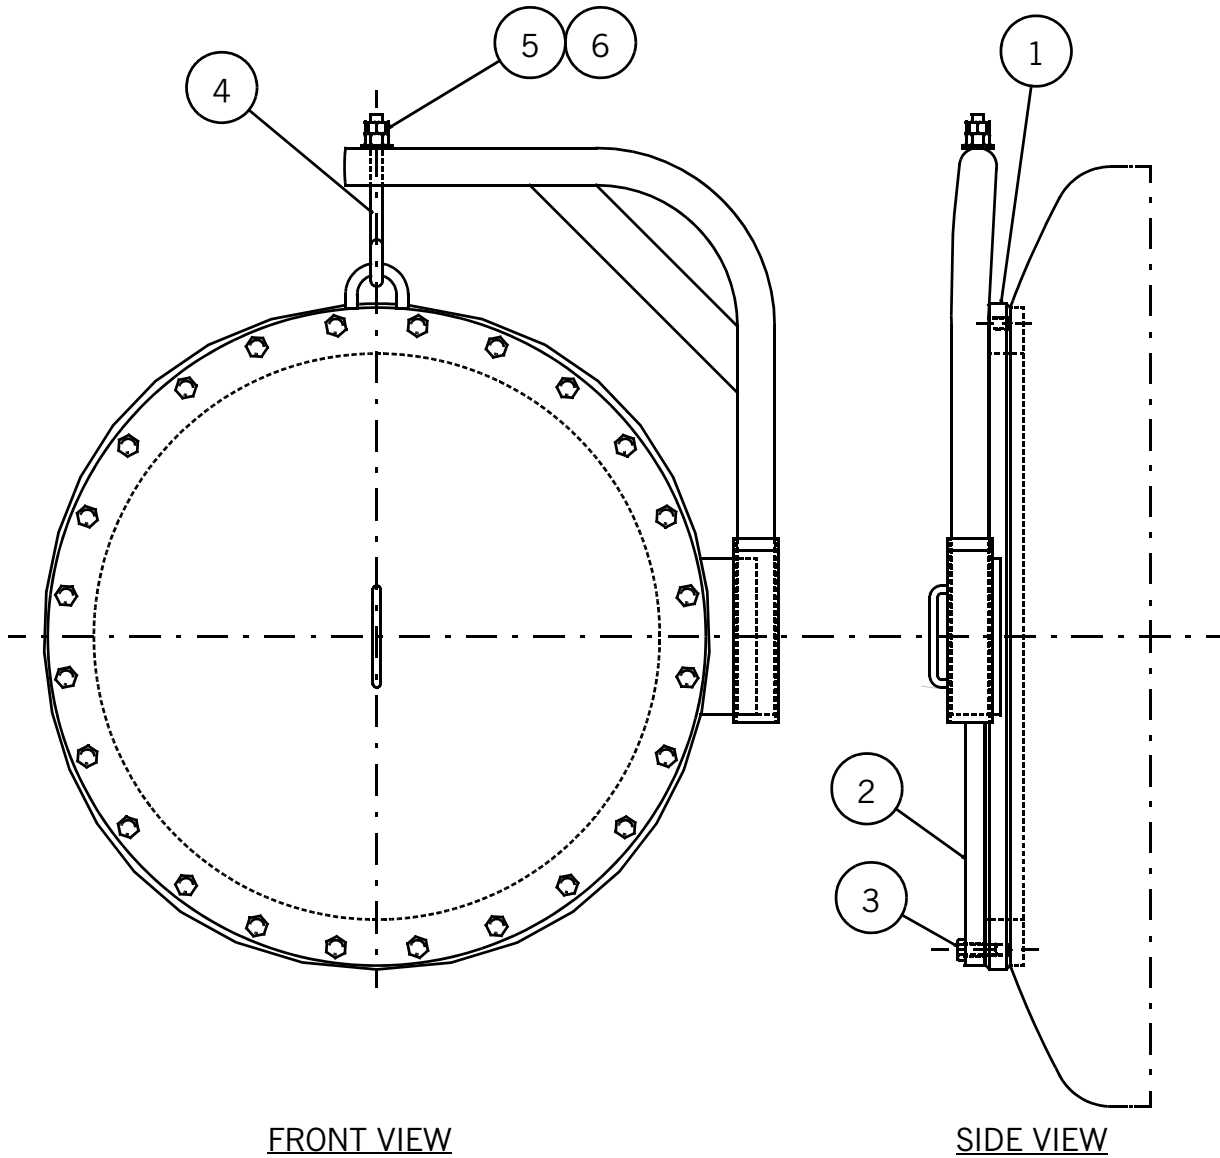


Table 6-23 Manway Assembly, 36" Davited, 50# D.P.



e-mail: info@cleaverbrooks.com

Web Address: <http://www.cleaverbrooks.com>